

CHANNEL		VALUE	FUNCTION
24ch	17ch		
1	1	000-255	PAN 0°→540°
2	2	000-255	PAN FINE
3	3	000-255	TILT 0°→260°
4	4	000-255	TILT FINE
5	5	000-255	PAN/TILT SPEED Fast to Slow
6	6	000-255	CYAN 0%→100%
7	7	000-255	MAGENTA 0%→100%
8	8	000-255	YELLOW 0%→100%
9	9	000-255	CTO 0%→100%
10	10	000-007 008-011 012-015 016-019 020-023 024-027 028-031 032-035 036-039 040-127 128-189 190-193 194-255	COLOR WHEEL Open Color 1 Color 2 Color 3 Color 4 Color 5 Color 6 Color 7 Color 8 Color Index Counter-Clockwise Rotation Fast to Slow Stop Clockwise Rotation Slow to Fast
11		000-007 008-015 016-023 024-031 032-039 040-047 048-055 056-063	GOBO WHEEL 1 Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7

		064-071 072-079 080-087 088-095 096-103 104-111 112-127 128-189 190-193 194-255	Gobo 1 Shaking Slow to Fast Gobo 2 Shaking Slow to Fast Gobo 3 Shaking Slow to Fast Gobo 4 Shaking Slow to Fast Gobo 5 Shaking Slow to Fast Gobo 6 Shaking Slow to Fast Gobo 7 Shaking Slow to Fast Clockwise Rotation Fast to Slow Stop Counter-Clockwise Rotation Slow to Fast
12		000-127 128-189 190-193 194-255	GOBO WHEEL 1 ROTATION Index 0°→360° Clockwise Rotation Fast to Slow Stop Counter-Clockwise Rotation Slow to Fast
13		000-007 008-013 014-019 020-025 026-031 032-037 038-043 044-049 050-055 056-061 062-067 068-073 074-079 080-085 086-091 092-097 098-103 104-109 110-115 116-121 122-127 128-189 190-193 194-255	GOBO WHEEL 2 Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo 9 Gobo 10 Gobo 1 Shaking Slow to Fast Gobo 2 Shaking Slow to Fast Gobo 3 Shaking Slow to Fast Gobo 4 Shaking Slow to Fast Gobo 5 Shaking Slow to Fast Gobo 6 Shaking Slow to Fast Gobo 7 Shaking Slow to Fast Gobo 8 Shaking Slow to Fast Gobo 9 Shaking Slow to Fast Gobo 10 Shaking Slow to Fast Clockwise Rotation Fast to Slow Stop Counter-Clockwise Rotation Slow to Fast
14		000-007 008-255	PRISM 1 (8-facet prism) Close Open

15		000-127 128-189 190-193 194-255	PRISM 1 ROTATION Index 0°→360° Clockwise Rotation Fast to Slow Stop Counter-Clockwise Rotation Slow to Fast
16		000-007 008-255	PRISM 2 (6-facet linear prism) Close Open
17		000-127 128-189 190-193 194-255	PRISM 2 ROTATION Index 0°→360° Clockwise Rotation Fast to Slow Stop Counter-Clockwise Rotation Slow to Fast
18	11	000-007 008-255	FROST Close Open
19	12	000-007 008-015 016-131 132-139 140-181 182-189 190-231 232-239 240-247 248-255	STROBE Close Open Strobe from Slow to Fast Open Fast Open Slow Close from Slow to Fast Open Slow Open Fast Close from Slow to Fast Open Random Strobe from Slow to Fast Open
20	13	000-255	DIMMER 0%→100%
21	14	000-255	DIMMER FINE
22	15	000-255	FOCUS 0%→100%
23	16	000-255	FOCUS FINE
24	17	000-029 030-039 040-049 050-059 060-069 070-079	SPECIAL FUNCTION (To activate following functions, stop in DMX value for at least 3 seconds.) Null Dimmer Curve Linear Dimmer Curve Square Law Dimmer Curve Inv Square Law Dimmer Curve S Power Mode Standard

		080-089	Power Mode Boost
		090-099	Power Mode Quiet
		100-109	Led Frequency Setting Enable
		110-119	Led Frequency Setting Disable
		120-129	Soften Enable
		130-139	Soften Disable
		140-179	Null
		180-189	Dimmer Speed Fast
		190-199	Dimmer Speed Smooth
		200-209	Reset All
		210-219	Reset Effect
		220-229	Reset Pan/Tilt
		230-255	Null