


Acme®

HUE 6 IP

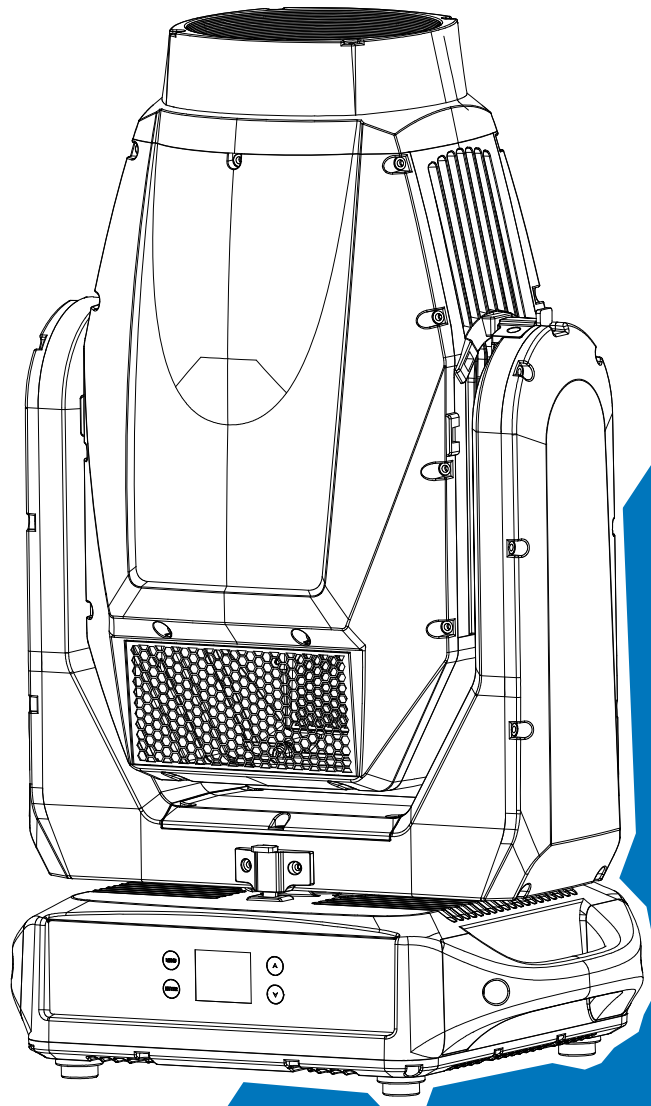

User Manual

Please read the instruction carefully before use

CONTENTS

01/ Safety Information.....	2
01/ Informations de sécurité.....	5
02/ Technical Specifications.....	8
03/ Overview.....	10
3.1 Battery Power.....	11
04/ Connecting Power and Data.....	13
4.1 Connecting Power.....	13
4.2 Connecting Data.....	14
05/ Fixture Installation.....	15
06/ Effect Wheels.....	19
07/ Operation.....	23
7.1 Control Menu.....	23
7.2 Updating Software.....	38
7.3 Home Position Adjustment.....	41
08/ Configuring the Device for DMX Control.....	51
8.1 Address Setting.....	51
8.2 DMX Protocol.....	52
09/ Error Information.....	60
10/ Troubleshooting.....	75
11/ Fixture Cleaning.....	76
12/ Approvals and Certifications.....	77

01/ Safety Information



Please read the instruction carefully which includes important information about the installation, usage and maintenance.

WARNING

Please keep this User Manual for future consultation. If you sell the fixture to another user, be sure that they also receive this instruction manual.


Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

- Unpack and check carefully to ensure that there is no transportation damage before using the fixture.
- This product is suitable for wet locations. Do not immerse in water.
- DO install and operate by qualified operator.
- DO NOT allow children to operate the fixture.
- Use safety cable (made of steel, min. diameter 4.0mm) when fixing the fixture. Handle the fixture by carrying its base instead of the head only.
- The fixture must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces.
- Be sure that no ventilation holes are blocked, otherwise the fixture could over heat.
- Before operation, ensure that you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Minimum ambient temperature TA: 0°C. Maximum ambient temperature TA: 40°C. Do not operate this product at a lower or higher temperature.
- DO NOT connect the device to any dimmer pack.
- Keep flammable materials away from the fixture while operating to avoid fire hazard.
- Make sure the power cord is not crimped or damaged; replace it immediately if damaged.
- Fixture's surface temperature may reach up to 75°C. DO NOT touch the housing bare-handed during its operation.

- Avoid any flammable liquids, water or metal from entering the fixture. If it happens, cut off the mains power immediately.
- DO NOT operate in a dirty or dusty environment. DO clean the fixture regularly.
- DO NOT touch any wiring during operation as there might be a hazard of electric shock.
- Avoid entanglement of the power cord with other wires.
- The minimum distance to objects/surface must be more than 5 meters.
- In the event of a serious operating problem, stop using the fixture immediately.
- Never turn the fixture off and on repeatedly.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
- DO NOT open the housing as there are no user serviceable parts inside.
- DO NOT attempt to operate this fixture if it becomes damaged. DO NOT attempt any repairs yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center if needed.
- Disconnect this product from its power source before servicing.
- DO use the original packaging or suitable road case if the device is to be transported.
- Check that the head tilt lock is released before packing for transportation.
- Avoid direct eye exposure to the light source while the product is on.
- DO NOT operate this product if you see damage on the housing, shields, or cables. Have the damaged parts replaced by an authorized technician at once.
- The device MUST NOT be switched on immediately if it has been exposed to strong temperature fluctuations (e.g. after transport) as condensation may occur inside. Please leave the device switched off until it has reached to ambient temperature.

- External sources of light beams from direct sunlight or any other strong light source, which penetrate the front lens of lighting fixtures, can cause severe internal damage. DO NOT expose the fixture front lens to light beams from direct sunlight or any other strong light source from any angle while unpacking, installation, use, and extended idle times outdoors. DO NOT focus a light beam from one lighting fixture directly towards another.

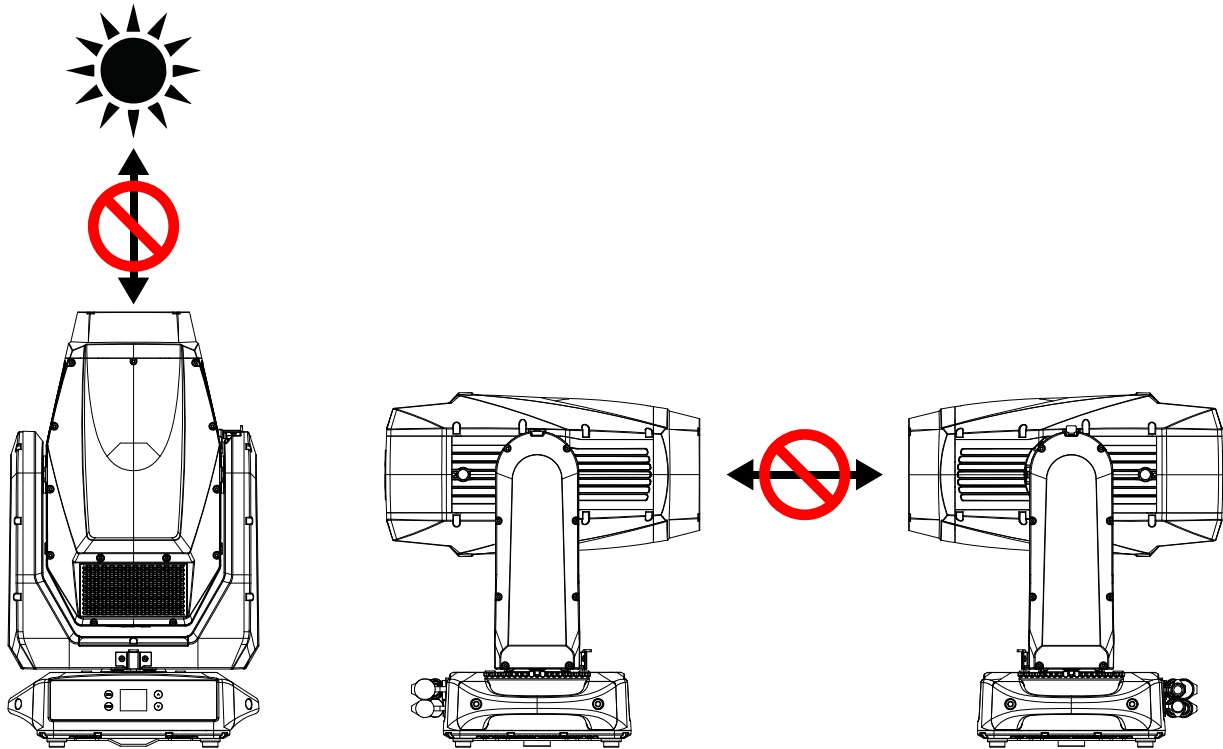

01/ Informations de sécurité



AVERTISSEMENT

Veillez lire attentivement les instructions, car elles contiennent des informations importantes concernant l'installation, l'utilisation et la maintenance.

Veillez conserver ce manuel d'utilisation pour consultation future. Si vous vendez l'appareil à un autre utilisateur, assurez-vous qu'il reçoive également ce manuel d'instructions.

Important:

Les dommages causés par le non-respect de ce manuel d'utilisation ne sont pas couverts par la garantie. Le revendeur n'acceptera aucune responsabilité pour les défauts ou problèmes qui en résulteraient.

- Déballer et vérifier soigneusement qu'il n'y a pas de dommages dus au transport avant d'utiliser l'appareil.
- Ce produit est adapté aux endroits humides. Ne pas immerger dans l'eau.
- FAIRE installer et utiliser par un opérateur qualifié.
- NE PAS laisser les enfants manipuler l'appareil.
- Utiliser une chaîne de sécurité lors de la fixation de l'appareil. Manipuler l'appareil en portant sa base et non uniquement par la tête.
- L'appareil doit être installé dans un endroit bien ventilé, à au moins 50 cm des surfaces adjacentes.
- Assurez-vous qu'aucune fente de ventilation n'est obstruée, sinon l'appareil surchauffera.
- Avant utilisation, assurez-vous de connecter ce produit à la tension appropriée conformément aux spécifications de ce manuel ou à l'étiquette des spécifications du produit.
- Il est important de mettre le conducteur jaune/vert à la terre pour éviter tout risque de choc électrique.
- Température ambiante minimale (TA): 0°C. Température ambiante maximale (TA): 40°C. Ne pas utiliser ce produit à une température inférieure ou supérieure.
- NE PAS connecter l'appareil à un gradateur (dimmer pack).
- Éloigner les matériaux inflammables de l'appareil pendant son fonctionnement pour éviter tout risque d'incendie.


- Vérifier que le cordon d'alimentation n'est ni écrasé ni endommagé; le remplacer immédiatement s'il est endommagé.
- La température de surface de l'appareil peut atteindre jusqu'à 75°C. NE PAS toucher le boîtier à mains nues pendant son fonctionnement.
- Évitez que des liquides inflammables, de l'eau ou des objets métalliques ne pénètrent dans l'appareil. Si cela se produit, coupez immédiatement l'alimentation électrique.
- NE PAS utiliser l'appareil dans un environnement sale ou poussiéreux. Nettoyez régulièrement l'appareil.
- NE PAS toucher de fils pendant le fonctionnement, car cela pourrait présenter un risque de choc électrique.
- Évitez que le cordon d'alimentation ne s'emmêle avec d'autres fils.
- La distance minimale par rapport aux objets/surfaces doit être de plus de 5 mètres.
- En cas de problème de fonctionnement grave, cessez immédiatement d'utiliser l'appareil.
- Ne jamais allumer et éteindre l'appareil à plusieurs reprises.
- Le boîtier, les lentilles ou le filtre ultraviolet doivent être remplacés s'ils sont visiblement endommagés.
- NE PAS ouvrir le boîtier, car il ne contient aucune pièce pouvant être réparée par l'utilisateur.
- NE PAS tenter d'utiliser cet appareil s'il est endommagé. NE PAS tenter de réparations vous-même. Les réparations effectuées par des personnes non qualifiées peuvent entraîner des dommages ou un dysfonctionnement. Veuillez contacter le centre d'assistance technique agréé le plus proche si nécessaire.
- Débranchez l'appareil de sa source d'alimentation avant toute maintenance.
- UTILISEZ l'emballage d'origine si l'appareil doit être transporté.
- Vérifiez que le verrou d'inclinaison de la tête est libéré avant l'emballage pour le transport.
- Évitez une exposition directe des yeux à la source lumineuse lorsque l'appareil est allumé.
- NE PAS utiliser ce produit si vous constatez des dommages sur le boîtier, les protections ou les câbles. Faites remplacer les pièces endommagées par un technicien agréé immédiatement.

- L'appareil NE DOIT PAS être allumé immédiatement s'il a été exposé à de fortes variations de température (par exemple après un transport), car de la condensation pourrait se former à l'intérieur. Veuillez laisser l'appareil éteint jusqu'à ce qu'il ait atteint la température ambiante.
- Les sources externes de rayons lumineux, comme la lumière directe du soleil ou toute autre source lumineuse intense, qui pénètrent à travers la lentille frontale des appareils d'éclairage, peuvent causer des dommages internes graves. NE PAS exposer la lentille frontale de l'appareil à des rayons lumineux provenant de la lumière directe du soleil ou de toute autre source lumineuse intense, sous quelque angle que ce soit, lors du déballage, de l'installation, de l'utilisation ou de périodes d'inactivité prolongées à l'extérieur. NE PAS diriger un faisceau lumineux d'un appareil d'éclairage directement vers un autre.


02/ Technical Specifications

AC Power	100-240Vac; 50/60Hz	
Max. Power Consumption	820W	
Light Source	THL600F-5C-R00-000	
Color Temperature	6000K	
Zoom Range	6°-50°	
Color Wheel	5 colors + open	
Gobo Wheels	Static Gobo Wheel	7 gobos + open
	Rotating Gobo Wheel	7 replaceable gobos + open
Movement	Pan	540°
	Tilt	270°
	16 bit movement resolution	
	Automatic pan/tilt repositioning	
	Mechanical pan/tilt lock for safe transportation and maintenance	
Control and Programming	DMX Channels	43/45/46/50
	Protocols	DMX512
		RDM
		Art-Net
		sACN
Firmware Update	via DMX or USB memory device	
Construction	Display	LCD display
	Battery backup for user setup without mains connection	
	DMX and RDM Data In/Out	5-pin IP XLR (optional with 3-pin IP XLR) RJ45 Connectors
	Power In/Out	Waterproof Power Connector in/out
	Protection Rating	IP66(Warning: Do not immerse the vent valve in water.)
Dynamic Effects	High CRI Mode: Ra≥90	
	0-100% continuous dimming and strobe effects	
	1 Rotating Gobo Wheel+7 Gobos+open	
	CMY color mixing	
	Variable color temperature control	
	Animation wheel: continuous rotation with variable speed and direction	
	Prisms: two indexing/rotating prisms (4-facet circular prism and	


	4-facet linear prism)	
	Frost: light frost effect and medium frost effect	
	Motorized zoom	
	Motorized focus	
	Outstanding strobe effect with variable speed	
Included Items	Power Cable	
	Two omega brackets with 1/4-turn fasteners	
	User Manual (this document)	
Dimensions	380x284x658mm	15.0"x11.2"x25.9"
Weight	32 kg	70.5 lbs

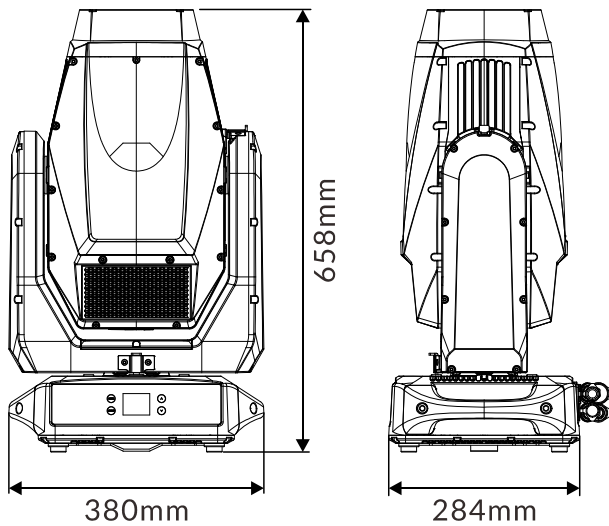

Photometric Diagram:

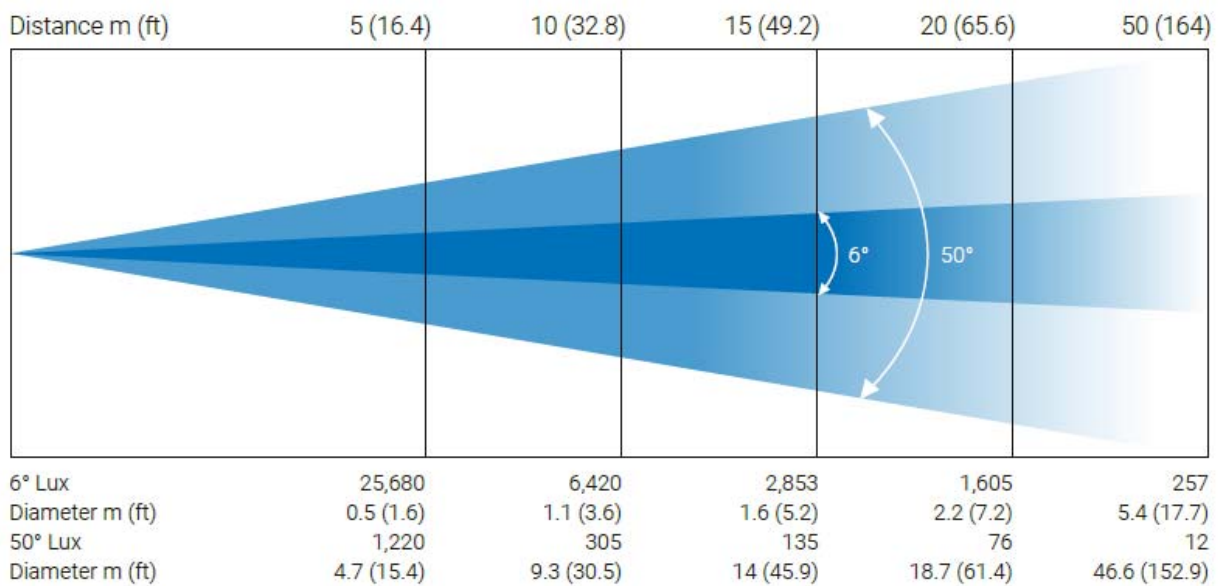

03/ Overview

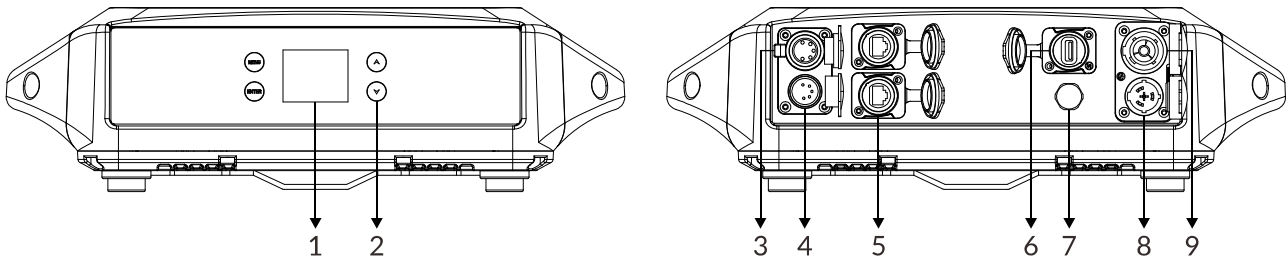

1. Display	To show the various menus and the selected function	
2. Buttons	MENU	To enter into, move backward or leave the menu
	▲ UP	To go backward or move up in the menu
	▼ DOWN	To go forward or move down in the menu
	ENTER	To perform the desired functions
3. DMX OUT	For DMX512 link, use 5-pin XLR cable to link the next units to output DMX signal (optional with 3-pin IP XLR)	
4. DMX IN	For DMX512 link, use 5-pin XLR cable to link the unit and DMX controller to input DMX signal (optional with 3-pin IP XLR)	
5. ETHERNET	For use with sACN or Art-Net controls	
6. FIRMWARE UPGRADE	Used to upgrade fixture's firmware	
7. RELEASE VALVE		
8. POWER IN	To connect to supply power	
9. POWER OUT	To connect to the next fixture	

3.1 Battery Power

This product contains a rechargeable battery.

Battery type: 14500 Lithium-ion battery (3.7V, 2200mAh, 8.14Wh), compliant with the new EU battery regulation EU2023/1542.



Do not expose the fixture or battery to excessive temperatures.

Be aware of the risk of terminals of the battery-operated fixture or battery being short-circuited by metal objects.

This fixture contains battery that is only replaceable by skilled persons.

Different types of batteries or new and used batteries are not to be mixed.

Exhausted batteries are to be removed from the fixture and safely disposed of.

If the fixture is to be stored unused for a long period, the batteries should be removed.

Do not use non-rechargeable batteries in place of rechargeable batteries.

Do not use modified or damaged batteries.

Replacing the battery with an incorrect type can defeat a safeguard and pose a risk of fire or explosion.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

Using the control panel with battery power:


The fixture contains a battery that enables you to use the control panel to set up the fixture even when it is not connected to the main power supply. The battery charges during fixture operation. All of the main setup options in the control panel are accessible on battery power, but the 'Fixture Test' and 'Reset Function' are not available.

To activate the display when the fixture is not connected to power, press and hold the [▲ UP] button for 3 seconds. The display extinguishes after 30 seconds with no user input. Press and hold the [▲ UP] button for 3 seconds again to re-activate.


Battery Replacement:

Warning! Disconnect the fixture from AC power before replacing its battery. Replace the battery with one of the same type only.

1. Disconnect the fixture from AC mains power and allow to cool.
2. Remove two screws in the bottom cover of the fixture and remove the base cover.

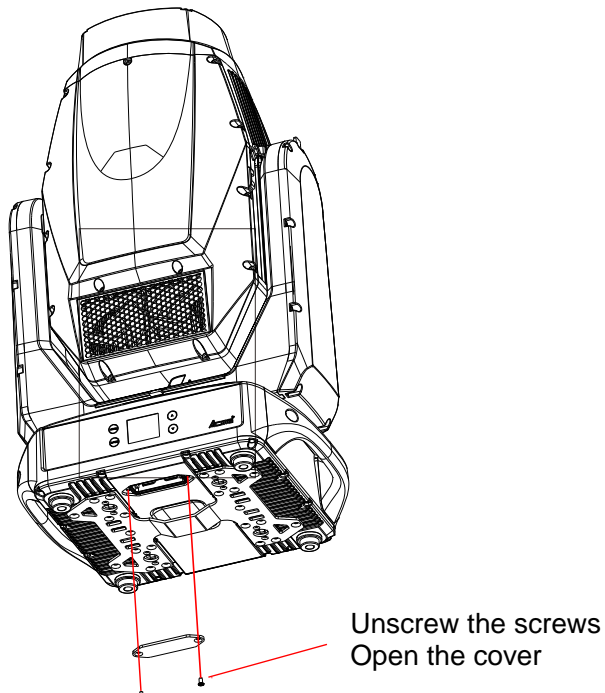

3. Remove two screws of the battery bracket that holds the battery in place and remove the battery bracket.
4. Remove the exhausted battery and insert a new one (only the same type) into the battery holder (Negative (-) towards the spring, Positive (+) away from the spring).

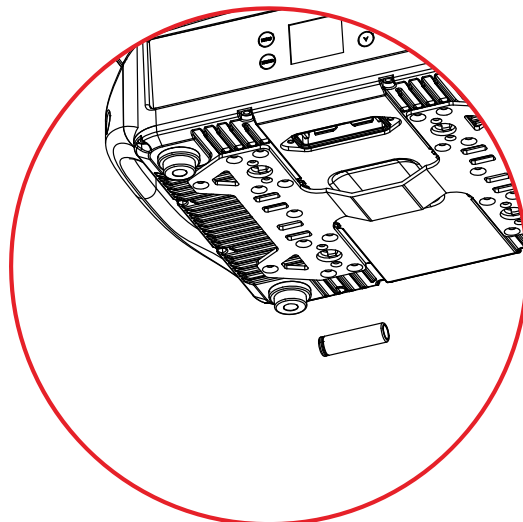

5. Reinstall the battery bracket and the base cover and check that it is close securely before reapplying power.

04/ Connecting Power and Data

4.1 Connecting Power

To apply power, first check that the head pan and tilt locks are released.

This fixture can operate on any 100-240Vac; 50/60Hz AC mains power supply.

The maximum power consumption is 820W.

The fixture must be grounded/earthed and able to be isolated from AC power. The AC power supply must incorporate a fuse or circuit breaker for fault protection.

Wiring and connection work must be carried out by a qualified electrician.

The power cable color coding is given in the figure below:

Wire	Color (US)	Wire	Color (EU)	Symbol	Conductor
	black		brown	L	live
	white		blue	N	neutral
	green		yellow/green	\perp or \oplus	ground (earth)

Power cord set that should be used: Listed SJOW flexible cord with rating: 300V, 105°C, VW-1, 16AWG x 3C, molded with 5-15P attachment plug and terminated with cord connector model RCAC3F-X-000-01 with rating 250V, 16A by Neutrik Technology(Ningbo) Co.,Ltd. The power cord shall be at least 914mm (It is to be measured from the face of attachment plug to the face of connector).


CAUTION!

DO NOT CONNECT THE FIXTURE TO AN ELECTRICAL DIMMER SYSTEM AS DOING SO MAY CAUSE DAMAGE.

4.2 Connecting Data

The fixture is equipped with 5-pin (or 3-pin) XLR sockets for DMX input and output. Use shielded twisted-pair high-quality DMX cable designed for RS-485 fixtures in order to connect the controller with the fixture and one fixture with another. For outdoor installations, use only waterproof DMX cables suitable for outdoor use.

The default pin-out on XLR sockets is as the following diagram:

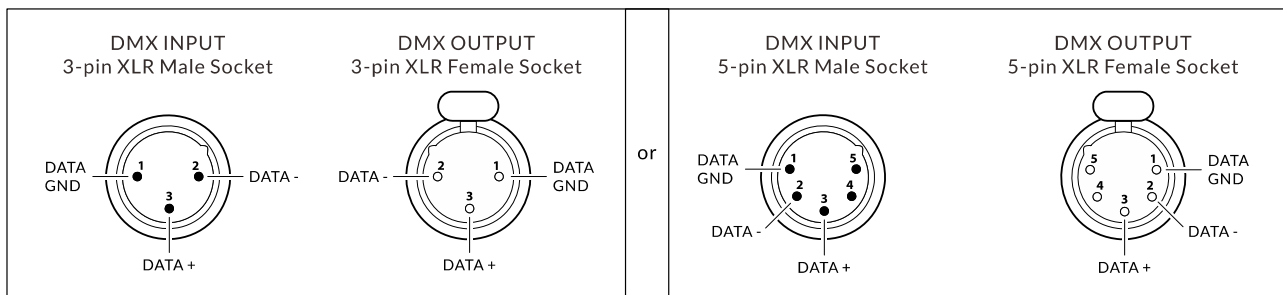


Building a serial DMX chain:

1. Connect the DMX data output from the controller to the fixture's data input socket.
2. Connect the DMX output of the first fixture in the DMX chain with the DMX input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.

Note: Up to 32 fixtures can be connected to the same DMX link.

3. Terminate the DMX output of the last fixture in the data link with a DMX terminator which is an XLR plug with a 120 Ω , 1/4 watt resistor connected between pins 2 and 3.

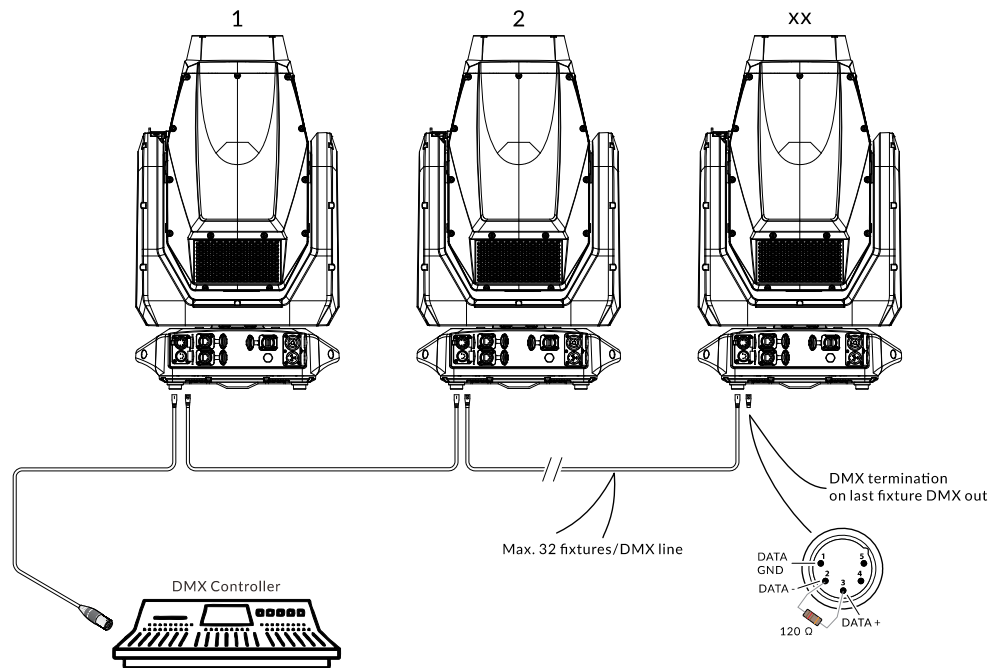

05/ Fixture Installation


The fixture is IP66-rated and designed for both indoor and outdoor events. This means that it is protected from:

- ▶ Dust, to the degree that dust cannot enter the device in sufficient quantities as to interfere with its operation.
- ▶ Water jets from any direction.


DO install and operate by qualified operator. Fixture(s) should be installed in areas outside walking paths, seating areas, or away from areas where unauthorized personnel might reach the fixture by hand. NEVER stand directly below the fixture(s) when rigging, removing or servicing.

Always ensure that the unit is firmly fixed to avoid vibration and slipping off during operation. Ensure that the trussing or area of installation must be able to hold 10 times the weight without any deformation. Always attach a safety cable (made of steel, min. diameter 4.0mm) that can hold at least 12 times the weight of the fixture whenever installing this fixture in a suspended environment to ensure that the fixture will not fall if the clamp fails.


This fixture is fully operational in three different mounting positions: hanging upside-down, mounted sideways on truss, or base positioned on floor. Always use and install a safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails. This fixture is suitable for theaters, studios, and similar locations.

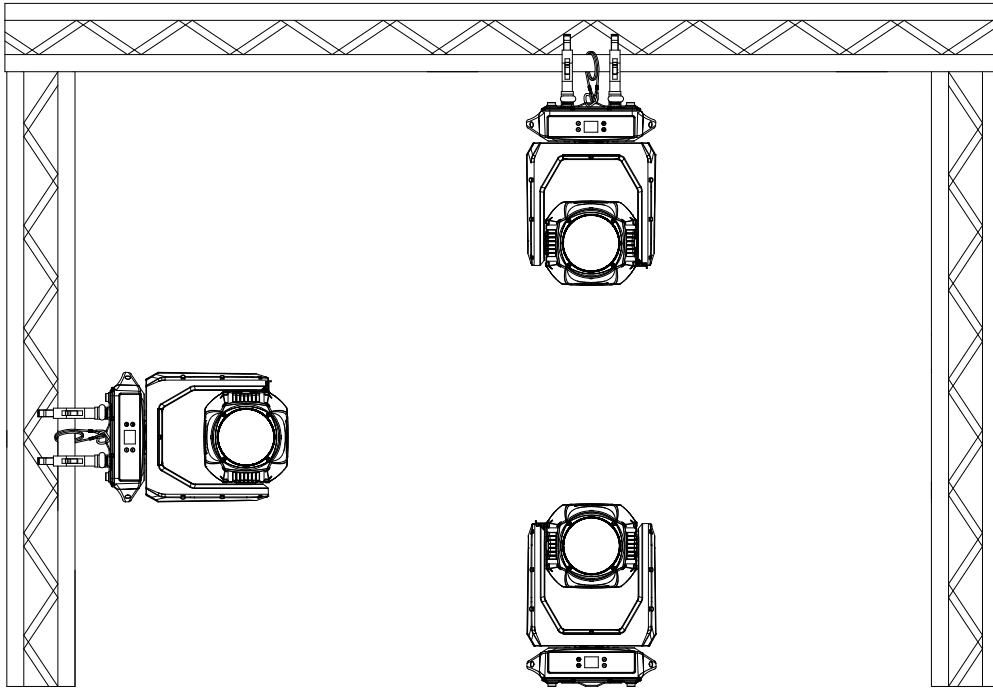

- Use only waterproof power cords and connectors suitable for outdoor use.
- Visually check panel connectors on accidental water leaks and dust before connecting related cable connectors. If some water appears in panel connectors, do not connect cable connectors, especially power!
- Fixtures require regular maintenance. Carefully check panel connectors for corrosion and scorching, and replace them promptly if damaged.
- All power and data connectors are equipped with rubber caps to prevent water ingress. All unused panel connectors have to be sealed by the rubber caps to avoid contact with water, especially seawater.

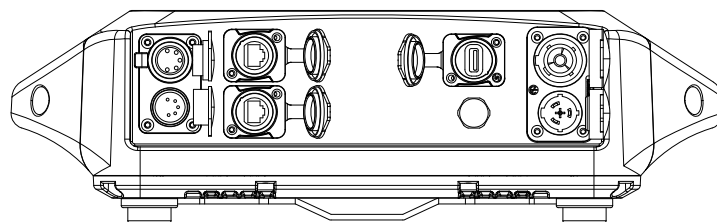

- When routing cables, always bring them into connectors from below. Form a service loop where needed, allowing gravity to divert condensation and water droplets away from the connectors.

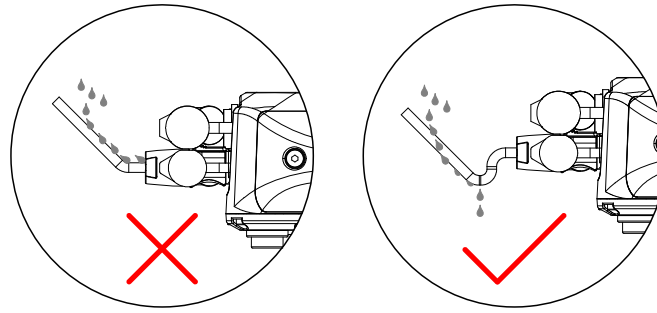


- To ensure the long-term reliable performance of the fixture, it is recommended to perform external cleaning and maintenance every one to two months. Promptly remove corrosive residues such as acidic substances and sea salt deposits attached to the surface of the fixture to slow down the oxidation process of the housing. Additionally, inspect and clean protective grilles and other structures to prevent small organisms like insects from entering the interior, avoiding functional abnormalities or fan blockages caused by the accumulation of insect remains.




Side Mounting:

To maintain the IP66 rating integrity of the fixture, all cables must be run towards the ground to prevent water accumulation around the connections.

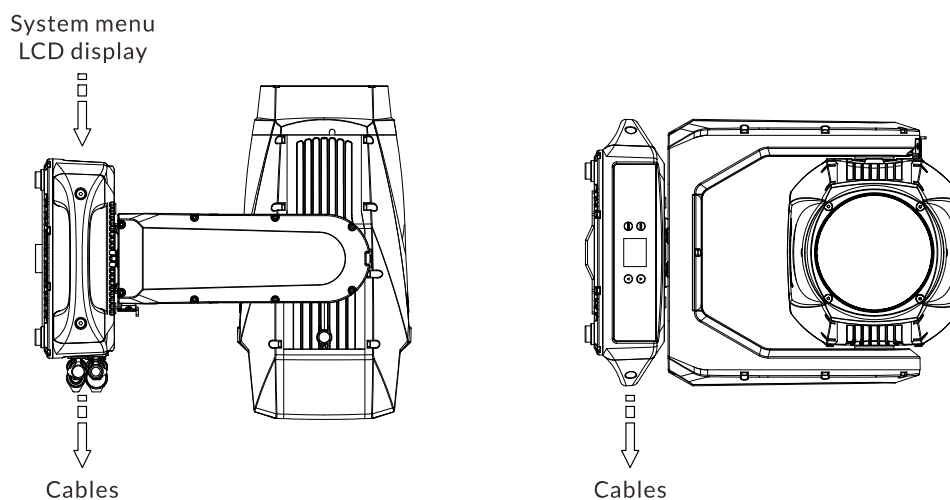


Steps for installing omega brackets to the fixture:

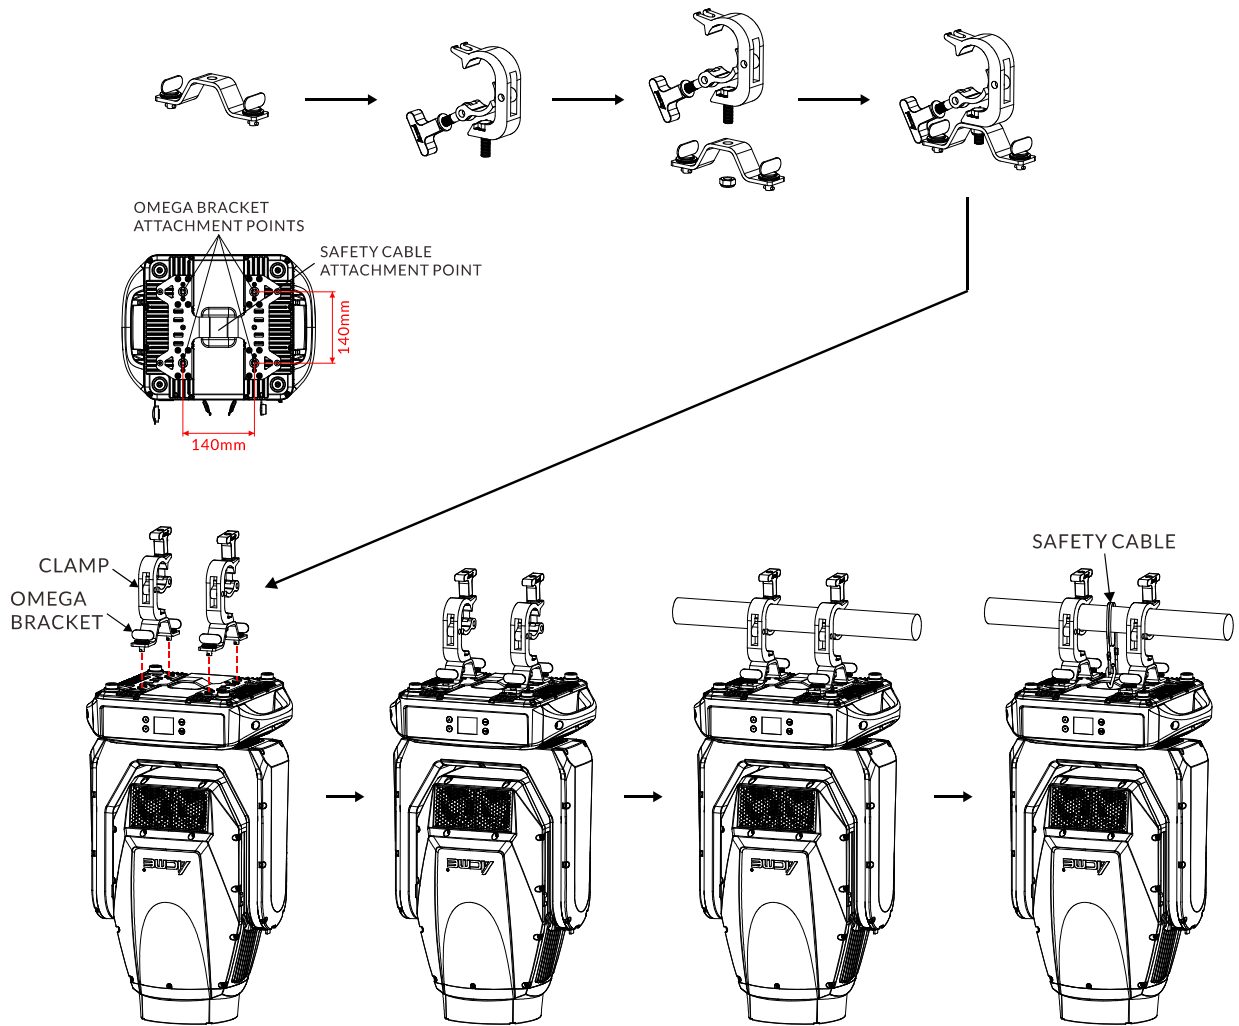


Accessories:


This fixture can be used with different types of accessories such as barndoors, top hat, or concentric rings. Four M4 mounting holes for optional accessories by others are reserved.

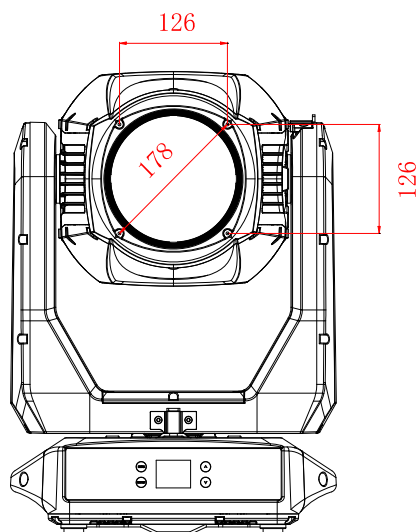


06/ Effect Wheels

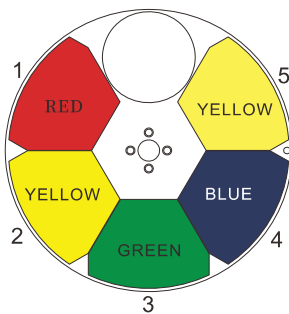


COLOR WHEEL

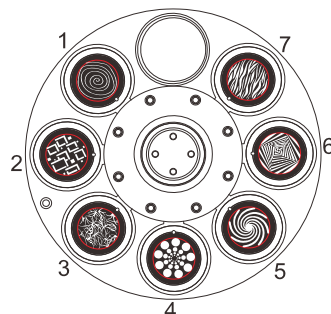

STATIC GOBO WHEEL

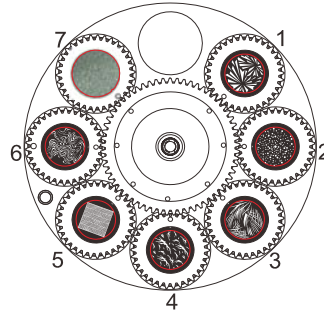

ROTATING GOBO WHEEL

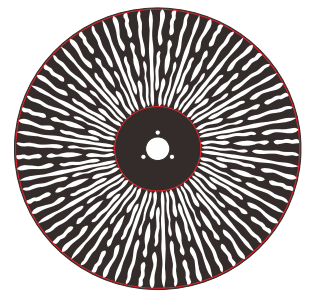ANIMATION WHEEL
3011001653

DANGER!

Replace the gobos with the device switched off only.
Unplug from mains before replacing the gobos!


Static Gobo Wheel		
Slot	Name	Part Number
Open	Empty	/
1	Spiral	3011001636
2	Grid Matrix	3011001637
3	Vine	3011001638
4	Dot Matrix Starburst	3011001639
5	Left - Handed Vortex	3011001640
6	3D Maze	3011001641
7	Zebra Stripe	3011001642

Rotating Gobo Wheel		
Slot	Name	Part Number
Open	Empty	/
1	Radiating Leaf	3011001643
2	Dot Matrix Stardust	3011001644
3	Feather-like Spreading	3011001645
4	Fern Leaf Cluster	3011001646
5	Diagonal Checke	3011001647
6	Scrolling Vine Vortex	3011001648
7	Frosted Diffusion	3015001303

Size of Static Gobos				
Slot	Gobo Diameter	Image Area Diameter	Gobo Thickness	Material
1~7	24mm+0/-0.2mm	19mm	1.1mm	Borofloat Glass
Size of Rotating Gobos				
Slot	Gobo Diameter	Image Area Diameter	Gobo Thickness	Material
1~7	20mm+0/-0.2mm	20mm	1.1mm	Borofloat Glass


Follow these precautions when using and handling rotating gobos:

- ▶ Original gobos have a special coating designed specifically to resist to high temperatures. Must use high temperature Borofloat or better glass. Replacement gobos must match the dimensions, construction, materials and quality as the gobos supplied as standard. Using gobos that do not meet this requirement can cause damage that is not covered by the product warranty.
- ▶ Do not use gobos with dark coatings on either side, as these will absorb heat – either directly from the light source or reflected back from other optical components – and will not be durable.
- ▶ Wear clean nitrile cleanroom gloves when handling gobos.
- ▶ Avoid scratching coated and uncoated sides.
- ▶ Correct gobo orientation is critical. Note the position of the reference marks (arrowed) in the gobo drive wheel and gobo holder. Each time you remove a gobo holder from the wheel, turn the drive wheel (twice if necessary) until the marks exactly line up. We recommend that you only remove one gobo holder at a time. Avoid turning the drive wheel while a gobo holder is out of the gobo wheel. This will keep the gobos in their correct orientation, avoiding the need to reprogram cues or adjust gobo positions in the fixture because a gobo orientation has changed during service.

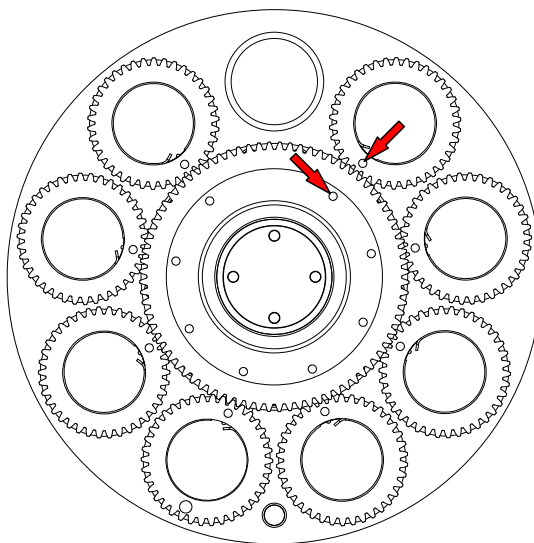


- ▶ Note how the gobo holder tongue engages in a recess in the gobo drive wheel when pulling the gobo holder out of the gobo wheel. You will need to reinstall the gobo holder


with the tongue in the same position in the drive wheel.

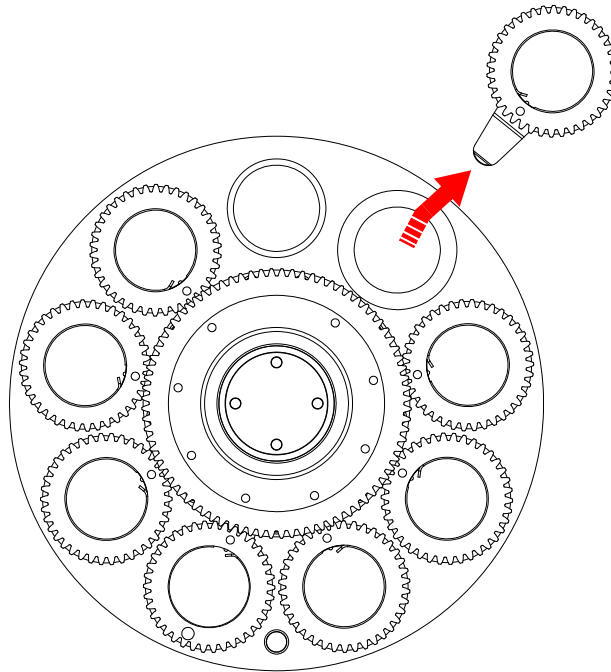


- ▶ Note the position of the alignment marks (arrowed) on gobo holders and gobos. Install gobos with the alignment marks next to each other.

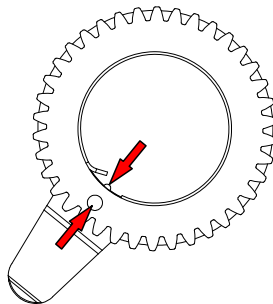

- ▶ With the teeth side of the gobo holder facing upwards, remove the gobo retaining spring carefully with an appropriate tool (e.g. plastic lever) and then remove the original gobo.

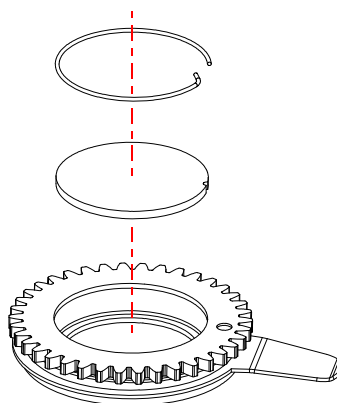

- ▶ Holding the new gobo by its edges, taking care to not leave fingerprints on the gobo, insert it into the gobo holder with the alignment marks on gobo and gobo holder oriented correctly and with the black side (or textured side of the textured glass gobos) facing downwards. Check that the gobo is fully seated in the holder.
Make sure that you install gobos facing in the correct direction - reflective side (or flat side of the textured glass gobos) towards the light source, black side (or textured side of the textured glass gobos) towards the front lens, or they may suffer heat damage.

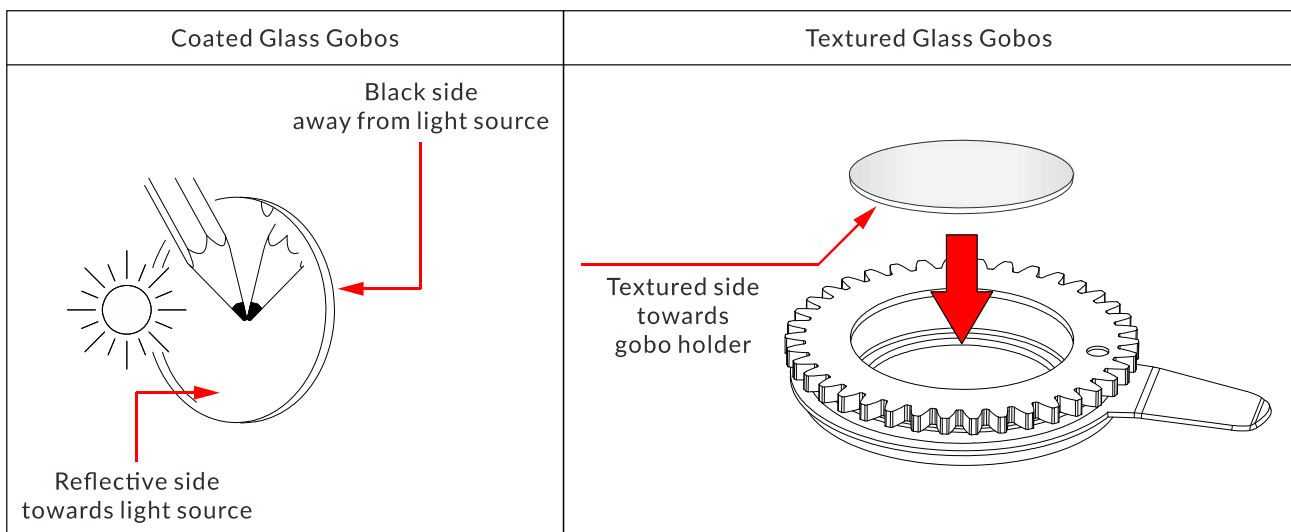

- ▶ Check that the retaining spring is pressed as flat as possible against the gobo and that the gobo is held securely in the gobo holder when reinstalling the retaining spring.
- ▶ Line up the reference marks in the gobo holder and gobo drive wheel and push the tongue correctly into its location in the gobo drive wheel when you install the gobo holder. Check that the gobo holder is held securely in the wheel after you have installed it.

07/ Operation

7.1 Control Menu

- ▶ To access the control menus, press the [MENU] button.
- ▶ Navigate the menu structure, using the [ENTER], [▲ UP] and [▼ DOWN] buttons.
- ▶ To select a menu option or to confirm a selection, press the [ENTER] button.
- ▶ To return to a higher level in the menu structure without making a change, press the [MENU] button, or wait 30 seconds.

The screen locks after 30 seconds of inactivity.
Press and hold the [MENU] button to unlock the screen.

The main functions are shown below:

MAIN MENU	SUBMENU	CHOICES/VALUES		
DMX Settings	DMX Address	1-512	(Default=1)	
	DMX Channel Mode	Mode 1 (50)		
		Mode 2 (45)		
		Mode 3 (46)		
		Mode 4 (43)		
	No DMX Status	Blackout		
		Hold		
		Manual		
	View DMX Value			
	Connect Option	Auto		
		DMX		
		Art-Net		
		sACN		
	Network	IP Address	Default 1:002.xxx.xxx.xxx	
			Default 2:010.xxx.xxx.xxx	
		Manual: xxx.xxx.xxx.xxx		
		Subnet Mask	xxx.xxx.xxx.xxx	
Art-Net Settings	Net	0-127	(Default=0)	
	Subnet	0-15	(Default=0)	
	Universe	0-15	(Default=0)	
sACN Settings	Universe	1-32000	(Default=1)	
	Priority	0-200	(Default=100)	
	Network to DMX	No		

MAIN MENU	SUBMENU	CHOICES/VALUES
		Yes
Fixture Settings	Pan Invert	No
		Yes
	Tilt Invert	No
		Yes
	P/T Feedback	No
		Yes
	P/T Reset Mode	Standard
		Sequence
	Focus Compensate	Disable
		Near(10m)
		Medium(20m)
		Far(30m)
	Dimmer Speed	Fast
		Smooth
	Dimmer Curve	Square Law
		Inv SQ Law
		Linear
		S Curve
	Led Refresh Rate	900Hz
		1000Hz
		1100Hz
		1200Hz
		1300Hz
		1400Hz
		1500Hz
		2500Hz
		4000Hz
		5000Hz
		6000Hz
		10KHz
		15KHz
		20KHz
		25KHz
Quiet		
Fan Mode	Standard	
	Quiet	
Blade Mode	Mode 1	
	Mode 2	
Gobo Short Cut	Enable	

MAIN MENU	SUBMENU	CHOICES/VALUES		
	Color Short Cut	Disable		
		Enable		
	Color Cal	Disable		
		Off		
	Cal Mode	On		
		Hi CRI		
	Sun Protection Mode	Hi Output		
		On		
	Display Settings	Display Invert	No	
			Yes	
Backlight Intensity		1-10	(Default=10)	
Temperature Unit		°C		
	°F			
Fixture Test	Auto Test	Single		
		Cycle		
	Manual Test	Clear	No/Yes	
		Pan	0-255	
		Tilt	0-255	
		Red	0-255	
		Green	0-255	
		Blue	0-255	
		Amber	0-255	
		Lime	0-255	
		CTO	0-255	
		Green correction	0-255	
		Color1	0-255	
		Color2	0-255	
		GOBO 1	0-255	
		R-GOBO 1	0-255	
		GOBO2	0-255	
		ANIMATION	0-255	
		R-ANIMATION	0-255	
		IRIS	0-255	
		Prism1	0-255	
		R-Prism1	0-255	
	Prism2	0-255		
R-Prism2	0-255			
Frost1	0-255			

MAIN MENU	SUBMENU	CHOICES/VALUES		
		Frost2	0-255	
		Zoom	0-255	
		Focus	0-255	
		Strobe	0-255	
		Dimmer	0-255	
		BLADE	0-255	
		BLADE DW 1	0-255	
		BLADE DW 2	0-255	
		BLADE UP 1	0-255	
		BLADE UP 2	0-255	
		BLADE LF 1	0-255	
		BLADE LF 2	0-255	
		BLADE RG 1	0-255	
		BLADE RG 2	0-255	
Fixture Information	Fixture Use Hour			
	LED Use Hour	Total LED Hour		
		LED On Hour		
		LED Hours Reset	Password=050	
	Temperature		Current	Max
		LED's		
	Humidity		Current	Max
		Base		
	Fan State	HEAD_F_FAN 1-5		
		HEAD_C_FAN 1-2		
		HEAD_D_FAN 1-2		
		Arm_E_Fan 1		
		Base_A_Fan1-2		
	Firmware Version			
RDM UID				
Error Logs	Fixture Errors			
	Reset	Error	No	
	Log		Yes Password=050	
Reset Function	Pan/Tilt Reset	No		
		Yes		
	Effect Reset	No		
		Yes		
	All Reset	No		
		Yes		

MAIN MENU	SUBMENU	CHOICES/VALUES
Special Function	USB Upgrade	No
		Yes
	Send Upgrade	No
		Yes
	Firmware Restore	No
		Yes
	Factory Settings	No
		Yes

DMX Settings

Enter the control menu and select **DMX Settings**, press ENTER. Use the UP/DOWN button to select **DMX Address**, **DMX Channel Mode**, **No DMX Status**, **View DMX Value**, **Connect Option**, **Network**, **Art-Net Settings**, **sACN Settings** or **Network to DMX**.

DMX Address

Select **DMX Address**, press ENTER.

Use UP/DOWN button to select an address, confirm your selection with ENTER.

CHANNEL MODE	DMX ADDRESS
Mode 1 (50)	1-463
Mode 2 (45)	1-468
Mode 3 (46)	1-467
Mode 4 (43)	1-470

DMX Channel Mode

Select **DMX Channel Mode**, press ENTER.

Use UP/DOWN button to select between **Mode 1 (50)**, **Mode 2 (45)**, **Mode 3 (46)** and **Mode 4 (43)**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

No DMX Status

Select **No DMX Status**, press ENTER.

Use UP/DOWN button to select one of the following status:

Blackout (Fixture blacks out if DMX signal stops)

Hold (The device continues to operate in the current mode with the last active DMX values until the signal returns)

Manual (The device accepts the DMX value stored in the 'Manual Test' menu)

Confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

View DMX Value

Select **View DMX Value**, press ENTER.

Use UP/DOWN button to select the desired DMX channel, for which the value is to be displayed.

To exit the menu, press MENU, or wait 30 seconds.

Connect Option

Select **Connect Option**, press ENTER.

Use UP/DOWN button to select **Auto**, **DMX**, **Art-Net** or **sACN**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Network

Select **Network**, press ENTER.

Use UP/DOWN button to select **IP Address** or **Subnet Mask**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Art-Net Settings

Select **Art-Net Settings**, press ENTER.

Use UP/DOWN button to select **Net**, **Subnet** or **Universe**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

sACN Settings

Select **sACN Settings**, press ENTER.

Use UP/DOWN button to select **Universe** or **Priority**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Network to DMX

Select **Network to DMX**, press ENTER.

Use UP/DOWN button to select **No** or **Yes**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Fixture Settings

Enter the control menu and select **Fixture Settings**, press ENTER. Use the UP/DOWN button to select **Pan Invert**, **Tilt Invert**, **P/T Feedback**, **Pan & Tilt Reset**, **Focus Compensate**, **Dimmer Speed**, **Dimmer Curve**, **Led Refresh Rate**, **Fan Mode**, **Blade Mode**, **Gobo Short Cut**, **Color Short Cut**, **Color Cal**, **Cal Mode** or **Sun Protection Mode**.

Pan Invert

Select **Pan Invert**, press ENTER.

Use UP/DOWN button to select **No** (pan invert deactivated) or **Yes** (pan invert activated), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Tilt Invert

Select **Tilt Invert**, press ENTER.

Use UP/DOWN button to select **No** (tilt invert deactivated) or **Yes** (tilt invert activated), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

P/T Feedback

Select **P/T Feedback**, press ENTER.

Use UP/DOWN button to select **No** (pan/tilt feedback deactivated) or **Yes** (pan/tilt feedback activated), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Pan/Tilt Reset

Select **Pan/Tilt Reset**, press ENTER.

Use UP/DOWN button to select **No** or **Yes** (the device will run built-in program to reset pan/tilt to their home positions), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Focus Compensate

Select **Focus Compensate**, press ENTER.

Use UP/DOWN button to select **Disable**, **Near(10m)**, **Medium(20m)**, or **Far(30m)**. Confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Dimmer Speed

Select **Dimmer Speed**, press ENTER.

Use UP/DOWN button to select **Fast** or **Smooth**, confirm your selection with ENTER.


To exit the menu, press MENU, or wait 30 seconds.

Dimmer Curve


Select **Dimmer Curve**, press ENTER.

Use UP/DOWN button to select **Linear**, **Square Law**, **Inv SQ Law** or **S Curve**, confirm your selection with ENTER.


Dimmer Modes

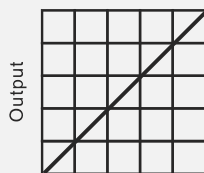


Optically Linear

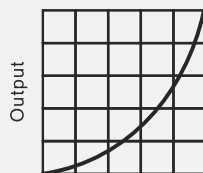

Square Law

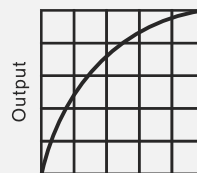

Inverse Square Law

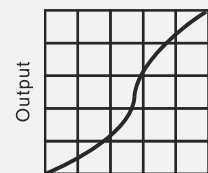

S-curve

To exit the menu, press MENU, or wait 30 seconds.

Led Refresh Rate

Select **Led Refresh Rate**, press ENTER.

Use UP/DOWN button to select **900Hz, 1000Hz, 1100Hz, 1200Hz, 1300Hz, 1400Hz, 1500Hz, 2500Hz, 4000Hz, 5000Hz, 6000Hz, 10KHz, 15KHz, 20KHz or 25KHz**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Fan Mode

Select **Cooling Mode**, press ENTER.

Use UP/DOWN button to select **Standard** or **Quiet**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Blade Mode

Select **Blade Mode**, press ENTER.

Use UP/DOWN button to select **Mode 1** or **Mode 2**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Gobo Short Cut

Select **Gobo Short Cut**, press ENTER.

Use UP/DOWN button to select **Enable** or **Disable**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Color Cal

Select **Color Calibration**, press ENTER.

Use UP/DOWN button to select a value between 50 and 100, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Color Short Cut

Select **Color Short Cut**, press ENTER.

Use UP/DOWN button to select **Enable** or **Disable**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Cal Mode

Select **Calibration Mode**, press ENTER.

Use UP/DOWN button to select Hi CRI and Hi Output, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Sun Protection Mode: (Set the 'Sun Protection Mode' to 'On' when using the fixture outdoors.)

Select **Sun Protection Mode**, press ENTER.

Use UP/DOWN button to select Off (sun protection mode deactivated) or On (The fixture will turn off the light source and automatically turn its head to a horizontal position when no signal is detected, preventing

Display Settings

Enter the control menu and select **Display Settings**, press ENTER. Use the UP/DOWN button to select **Display Invert**, **Backlight Intensity**, **Temperature Unit** or **Language**.

Display Invert

Select **Display Invert**, press ENTER.

Use UP/DOWN button to select **No** (display normal) or **Yes** (display inverted), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Backlight Intensity

Select **Backlight Intensity**, press ENTER.

Use UP/DOWN button to select a value between **1** (dark) and **10** (bright), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Temperature Unit

Select **Temperature Unit**, press ENTER.

Use UP/DOWN button to select °C or °F, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Language

Select **Language**, press ENTER.

Use UP/DOWN button to select **English** or **Chinese**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Fixture Test

Enter the control menu and select **Fixture Test**, press ENTER. Use the UP/DOWN button to select **Auto Test** or **Manual Test**.

Auto Test

Select **Auto Test**, press ENTER.

Use UP/DOWN button to select **Single** (the device immediately performs a single automatic self-test) or **Cycle** (the device immediately performs a cyclic automatic self-test), confirm your selection with ENTER.

To exit the menu, press MENU.

Manual Test

Select **Manual Test**, press ENTER.

Use UP/DOWN button to select the channel for which the manual test is to be performed, confirm your selection with ENTER.

Use UP/DOWN button to select a value, confirm your selection with ENTER.

To exit the menu, press MENU.

(The device returns to its original DMX state after the manual test. The test values are saved automatically when the device is switched off.)

Fixture Information

Enter the control menu and select **Fixture Information**, press ENTER. Use the UP/DOWN button to select **Fixture Use Hour**, **LED Use Hour**, **Temperature**, **Humidity**, **Fan State**, **Firmware**

Version, RDM UID or Error Logs.

Fixture Use Hour

Select **Fixture Use Hour**, press ENTER.

The operating hours is displayed.

To exit the menu, press MENU, or wait 30 seconds.

LED Use Hour

Select **LED Use Hour**, press ENTER.

Use UP/DOWN button to select **Total LED Hour** (total time) or **LED On Hour** (current switch-on time), confirm your selection with ENTER.

The total time or current switch-on time is displayed.

Use UP/DOWN button to select **LED Hours Reset**, confirm your selection with ENTER.

Use UP/DOWN button to set the password 050, confirm your selection with ENTER. The LED operating hours is reset.

To exit the menu, press MENU, or wait 30 seconds.

Temperature

Select **Temperature**, press ENTER.

The device temperature is displayed.

To exit the menu, press MENU, or wait 30 seconds.

Humidity

Select **Humidity**, press ENTER.

The device humidity is displayed.

To exit the menu, press MENU, or wait 30 seconds.

Fan State

Select **Fan State**, press ENTER.

The fan status is displayed.

To exit the menu, press MENU, or wait 30 seconds.

Firmware Version

Select **Firmware Version**, press ENTER.
The firmware version is displayed.
To exit the menu, press MENU, or wait 30 seconds.

RDM UID

Select **RDM UID**, press ENTER.
The RDM UID is displayed.
To exit the menu, press MENU, or wait 30 seconds.

Error Logs

Select **Error Logs**, press ENTER.
Use UP/DOWN button to select **Fixture Errors**, confirm your selection with ENTER.
The error list is displayed.
Use UP/DOWN button to select **Reset Error Log**, confirm your selection with ENTER.
If you wish to reset the relevant error logs, select **Yes**. If you do not wish to reset anything, select **No**. Confirm your selection with ENTER.
If you select **Yes**, use UP/DOWN button to set the password 050, confirm your selection with ENTER. The relevant error logs are reset.
To exit the menu, press MENU, or wait 30 seconds.

Reset Function

Enter the control menu and select **Reset Function**, press ENTER. Use the UP/DOWN button to select **Pan/Tilt Reset**, **Effect Reset** or **All Reset**.

Pan/Tilt Reset

Select **Pan/Tilt Reset**, press ENTER.
Use UP/DOWN button to select **No** or **Yes** (the device will run built-in program to reset pan/tilt to their home positions), confirm your selection with ENTER.
To exit the menu, press MENU, or wait 30 seconds.

Effect Reset

Select **Effect Reset**, press ENTER.

Use UP/DOWN button to select **No** or **Yes** (the device will run built-in program to reset effect to their home positions), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

All Reset

Select **All Reset**, press ENTER.

Use UP/DOWN button to select **No** or **Yes** (the device will run built-in program to reset all to their home positions), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Special Function

Enter the control menu and select **Special Function**, press ENTER. Use the UP/DOWN button to select **USB Upgrade**, **Send Upgrade**, **Firmware Restore** or **Factory Settings**.

USB Upgrade

Select **USB Upgrade**, press ENTER.

The upgrade files are displayed. (See the 'Updating Software' section for details.)

To exit the menu, press MENU, or wait 30 seconds.

Send Upgrade

Select **Send Upgrade**, press ENTER.

If you wish to send upgrade files from this fixture to next fixtures to upgrade their firmware, select **Yes**. Once Yes is selected, the display of this fixture will show “**Sending Packet, Please Wait...**” while the display of next fixtures will show “**Upgrading, Please Wait...**”. A percentage bar will also be displayed. After the update is complete, fixtures will perform a reset (this can take some time).

If you do not wish to send anything, select **No**. Confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Firmware Restore (After replacing fixture's vice board(s), this function allows you to synchronize the main board's software to all vice board(s), as the software version of the replaced vice board(s) may not consistent with that of the main board.)

Select **Firmware Restore**, press ENTER.

If you wish to restore fixture's firmware, select **Yes**. Once Yes is selected, the display will show “**Upgrading, Please Wait...**”. A percentage bar will also be displayed. After the update is complete, the fixture will perform a reset (this can take some time).

If you do not wish to restore anything, select **No**. Confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

Factory Settings

Select **Factory Settings**, press ENTER.

If you wish to reset the device to the factory settings, select **Yes**. If you do not wish to reset anything, select **No**. Confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.


7.2 Updating Software

Only qualified technicians should perform this function! Note all menu settings before updating software! Please note, up to 32 fixtures can be connected together and updated at the same time.

Note: Before using the USB flash drive to update the software, please ensure that the USB flash drive is formatted with the FAT32 file system. Otherwise, you will need to reformat the USB flash drive to FAT32 before transferring the .yfu files, as the fixture will only recognize the files stored on a FAT32 formatted drive.

Format the USB flash drive:

- ▶ Connect the USB flash drive to the computer.
- ▶ Right-click on the USB flash drive disk.
- ▶ Click "Format".
- ▶ Select the "FAT32" file system and click "Start".

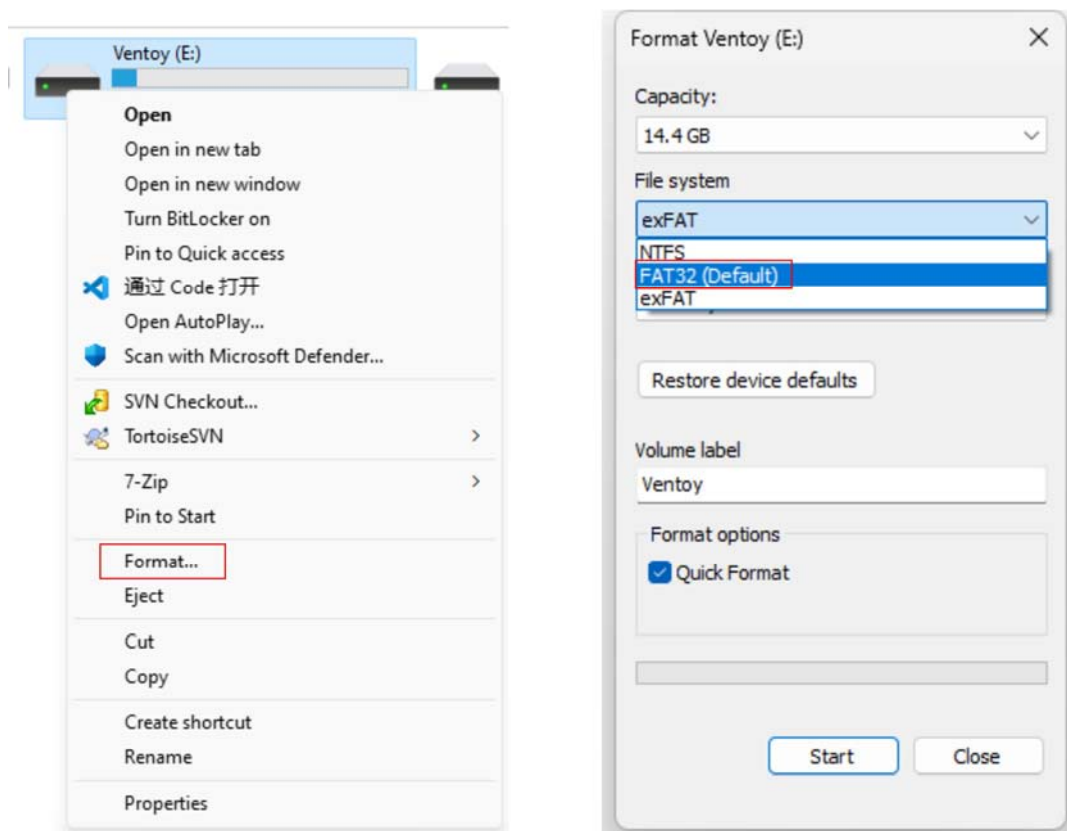

Updating Software:

1. Download the software update files from the ACME website.
2. Copy the software files to a compatible USB flash drive.

Note: To avoid the risk of uploading the wrong file to the fixture, make sure that there are no other files on your flash drive.

3. Disconnect DMX and Ethernet connections and power the fixture on.
4. Insert the USB flash drive into the **FIRMWARE UPGRADE** port located on the rear panel of the fixture.
5. Locate **“Special Function”** within the system menu and press ENTER. Scroll to the **“USB Upgrade”** submenu and press ENTER.
6. Two software files will be displayed as downloaded earlier. Highlight the first file (V00) and press ENTER. Select **“Yes”** to begin the first of two updating processes. Once Yes is selected, the display will show **“Copying Files, Please Wait...”**. After copying is complete, the display will show **“Upgrading, Please Wait...”**. A percentage bar will also be displayed.
7. After the first update is complete, the fixture will perform a reset (this can take some time).
8. Once the reset is complete, scroll to the **“Special Function”** menu again and press ENTER. Scroll to the **“USB Upgrade”** submenu and press ENTER.
9. Highlight the second file (Vxx) this time and press ENTER. Select **“Yes”** to begin the second and final updating process. Once Yes is selected, the display will show **“Copying Files, Please Wait...”** again. After copying is complete, the display will show **“Upgrading, Please Wait...”**. A percentage bar will also be displayed.
10. After the second update is complete, the fixture will perform another reset (this can take some time as well).
11. Remove the USB flash drive.
12. After the reset process is complete, check the new software version to confirm it is updated to the most recent software.

RDM functions: Certain menus of the device and functions can be called up via the RDM protocol.

The parameter IDs are implemented as follows for different commands:

Parameter ID	Command 'Discovery'	Command 'Set'	Command 'Get'
DISC_UNIQUE_BRANCH	√		
DISC_MUTE	√		
DISC_UN_MUTE	√		
DEVICE_INFO			√
SUPPORTED_PARAMETERS			√
SOFTWARE_VERSION_LABEL			
DMX_START_ADDRESS		√	√
IDENTIFY_DEVICE		√	√
DEVICE_MODEL_DESCRIPTION			√
PARAMETER_DESCRIPTION			√
MANUFACTURER_LABEL			√
DEVICE_LABEL		√	√
FACTORY_DEFAULTS		√	√
BOOT_SOFTWARE_VERSION_ID			√
BOOT_SOFTWARE_VERSION_LABEL			√
DMX_PERSONALITY		√	√
DMX_PERSONALITY_DESCRIPTION			√
SLOT_INFO			√
SLOT_DESCRIPTION			√
SENSOR_DEFINITION			√
SENSOR_VALUE			√
DEVICE_HOURS			√
LAMP_HOURS			√
PAN_INVERT		√	√
TILT_INVERT		√	√
RESET_DEVICE		√	√
CURVE		√	√
CURVE_DESCRIPTION			√

√ -Command implemented for the respective parameter ID

7.3 Home Position Adjustment

- ▶ To access the control menus, press the [MENU] button.
- ▶ To access the offset menus, long-press the [ENTER] button.
- ▶ Navigate the offset menus, using the [ENTER], [▲ UP] and [▼ DOWN] buttons.
- ▶ To select a menu option or to confirm a selection, press the [ENTER] button.
- ▶ To return to a higher level in the menu structure without making a change, press the [MENU] button, or wait 30 seconds.

OFFSET MENU	VALUES
Frequency(1200Hz)	1072~1327
Dimming Start	0~255
Dim 1 Offset	-128~127
.....
Dim 9 Offset	-128~127
Pan	-128~127
Tilt	-128~127
Red	-128~127
Green	-128~127
Blue	-128~127
Amber	-128~127
Lime	-128~127
CTO	-128~127
Green correction	-128~127
Color 1	-128~127
Color 2	-128~127
Gobo 1	-128~127
R-Gobo 1	-128~127
Gobo 2	-128~127
Animation	-128~127
R-Animation	128~127
IRIS	128~127
Prism 1	-128~127
R-Prism 1	-128~127
Prism 2	-128~127
R-Prism 2	-128~127

Frost1	-128~127
Frost2	-128~127
Zoom	-128~127
Focus	-128~127
Strobe	-128~127
BLADE	-128~127
BLADE DW 1	-128~127
BLADE DW 2	-128~127
BLADE UP 1	-128~127
BLADE UP 2	-128~127
BLADE LF 1	-128~127
BLADE LF 2	-128~127
BLADE RG 1	-128~127
BLADE RG 2	-128~127

Dimming Start

Select **Dimming Start**, press ENTER.

Use UP/DOWN button to select a value between 0 and 255, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Dim 1 Offset

Select **Dim 1 Offset**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

.....

Dim 9 Offset

Select **Dim 6 Offset**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Frequency(Hz)

Select **Frequency(Hz)**, press ENTER.

Use UP/DOWN button to select a value, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Frequency	VALUES
900Hz	772~1027
1000Hz	872~1127
1100Hz	972~1227
1200Hz	1072~1327
1300Hz	1172~1427
1400Hz	1272~1527
1500Hz	1372~1627
2500Hz	2372~2627
4000Hz	3872~4127
5000Hz	4872~5127
6000Hz	5872~6127
10KHz	9872~10127
15KHz	14872~15127
20KHz	19872~20127
25KHz	24872~25127

Pan

Select **Pan**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Tilt

Select **Tilt**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Red

Select **Red**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Green

Select **Green**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Blue

Select **Yellow**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Amber

Select **Amber**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Lime

Select **Lime**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

CTO

Select **CTO**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Green correction

Select **Green correction**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Color 1

Select **Color 1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Color 2

Select **Color 2**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

GOBO 1

Select **GOBO 1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

R-GOBO 1

Select **R-GOBO 1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

GOBO 2

Select **GOBO 2**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

ANIMATION

Select **ANIMATION**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

R-ANIMATION

Select **R-ANIMATION**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

IRIS

Select **IRIS**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Prism1

Select Prism1, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

R- Prism1

Select **R- Prism1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Prism2

Select **Prism2**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

R-Prism2

Select **R-Prism2**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Frost 1

Select **Frost 1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Frost 2

Select **Frost 1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Zoom

Select **Zoom**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Focus

Select **Focus**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

Strobe

Select **Strobe**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

BLADE

Select **BLADE**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

BLADE DW 1

Select **BLADE DW 1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

BLADE DW 2

Select **BLADE DW 2**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

BLADE UP 1

Select **BLADE UP 1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

BLADE UP 2

Select **BLADE UP 2**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

BLADE LF 1

Select **BLADE LF 1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

BLADE LF 2

Select **BLADE LF 2**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

BLADE RG 1

Select **BLADE RG 1**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

BLADE RG 2

Select **BLADE RG 2**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

08/ Configuring the Device for DMX Control

8.1 Address Setting

All fixtures should be given a DMX starting address when operating with a DMX controller, in order to ensure that the correct fixture responds to the correct control signal. Incorrect settings will result in unpredictable responses from the lighting controller.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each individual fixture.

Setting all fixtures to the same DMX address will cause all fixtures to react in the same way. In this case, please note that changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will “listen” starting at the channel number you have set, based on the quantity of DMX channels of each fixture. That means changing the settings of one channel will only affect the selected fixture.

For example, if the first fixture is set to 50 ch DMX mode with a start DMX address of 1, the following fixture in the DMX chain should then be set to a DMX address of 51. As the first fixture uses all the first 50 DMX channels, the next available channel is 51 ($50+1=51 >> 51$).

See the chart below for more details:

Channel Mode	Unit 1 Address	Unit 2 Address	Unit 3 Address	Unit 4 Address	Unit xxx Address
50 channels	1	51	101	151
45 channels	1	46	91	136
46 channels	1	47	93	139
43 channels	1	44	87	130

8.2 DMX Protocol

Valid from firmware version: V1.0

CHANNEL				VALUE	FUNCTION
50ch	45ch	46ch	43ch		
1	1	1	1	000-255	PAN 0°→540°
2	2	2	2	000-255	PAN FINE
3	3	3	3	000-255	TILT 0°→260°
4	4	4	4	000-255	TILT FINE
5	5	5	5	000-255	PAN/TILT SPEED Fast to Slow
6	6			000-255	RED 0%→100%
7				000-255	RED FINE 0%→100%
8	7			000-255	GREEN 0%→100%
9				000-255	GREEN FINE 0%→100%
10	8			000-255	BLUE 0%→100%
11				000-255	Blue fine 0%→100%
12	9			000-255	Amber 0%→100%
13				000-255	Amber Fine 0%→100%
14	10			000-255	Lime 0%→100%
15				000-255	Lime Fine 0%→100%
16	11			000-255	Crossfade 0%→100%
		6	6	000-255	Cyan 0%→100%
		7		000-255	Cyan Fine 0%→100%
		8	7	000-255	Magenta 0%→100%

		9		000-255	Magenta fine 0%→100%
		10	8	000-255	Yellow 0%→100%
		11		000-255	Yellow fine 0%→100%
		12	9	000-255	Crossfade 0%→100%
17	12	13	10	000	CTO Close
				001-006	6500K
				007-012	6400K
				013-018	6300K
				019-024	6200K
				025-030	6100K
				031-036	6000K
				037-042	5900K
				043-048	5800K
				049-054	5700K
				055-060	5600K
				061-066	5500K
				067-072	5400K
				073-078	5300K
				079-084	5200K
				085-090	5100K
				091-096	5000K
				097-102	4900K
				103-108	4800K
				109-114	4700K
				115-120	4600K
				121-126	4500K
				127-132	4400K
				133-138	4300K
				139-144	4200K
145-150	4100K				
151-156	4000K				
157-162	3900K				
163-168	3800K				
169-174	3700K				
175-180	3600K				
181-186	3500K				
187-192	3400K				
193-198	3300K				
199-204	3200K				
205-210	3100K				
211-216	3000K				
217-222	2900K				

				223-228	2800K
				229-234	2700K
				235-240	2600K
				241-255	2500K
18	13	14	11	000-255	GREEN CORRECTION 0%→100%
					Color1
				000-007	Open
				008-009	010 Medium Yellow
				010-011	019 Fire
				012-013	021 Gold Amber
				014-015	025 Sunset Red
				016-017	036 Medium Pink
				018-019	052 Light Lavender
				020-021	058 Lavender
				022-023	068 Sky Blue
				024-025	079 Just Blue
				026-027	088 Lime Green
				028-029	089 Moss Green
				030-031	090 Dark Yellow Green
				032-033	100 Spring Yellow
				034-035	101 Yellow
				036-037	102 Light Amber
				038-039	103 Straw
				040-041	104 Deep Amber
				042-043	105 Orange
19	14	15	12	044-045	111 Dark Pink
				046-047	115 Peacock Blue
				048-049	116 Medium Blue-Green
				050-051	117 Steel Blue
				052-053	118 Light Blue
				054-055	120 Deep Blue
				056-057	121 LEE Green
				058-059	122 Fern Green
				060-061	124 Dark Green
				062-063	126 Mauve
				064-065	128 Bright Pink
				066-067	132 Medium Blue
				068-069	135 Deep Golden Amber
				070-071	136 Pale Lavender
				072-073	137 Special Lavender
				074-075	138 Pale Green
				076-077	139 Primary Green
				078-079	141 Bright Blue
				080-081	147 Apricot
				082-083	152 Pale Gold
				084-085	157 Pink

				086-087 088-089 090-091 092-093 094-095 096-097 098-099 100-101 102-103 104-105 106-107 108-109 110-255	162 Bastard Amber 164 Flame Red 165 Daylight Blue 170 Deep Lavender 181 Congo Blue 194 Surprise Pink 197 Alice Blue 201 Full C.T. Blue 202 Half C.T. Blue 353 Lighter Blue 778 Millennium Gold Amber Null
20	15	16	13	000-007 008-018 019-029 030-040 041-051 052-063 064-068 069-073 074-078 079-083 084-088 089-093 094-098 099-103 104-108 109-113 114-118 119-123 124-127 128-189 190-193 194-255	Color2 Open Color 1 Color 2 Color 3 Color 4 Color 5 Open Open+ Color1 Color1 Color1+ Color2 Color2 Color2+ Color3 Color3 Color3+ Color4 Color4 Color4+ Color5 Color5 Color5+Open Open Counter-Clockwise rotation, fast to slow Stop Clockwise rotation, slow to fast
21	16	17	14	000-007 008-015 016-023 024-031 032-039 040-047 048-055 056-063 064-072 073-081	GOBO 1 OPEN GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6 GOBO7 GOBO1 Shaking Slow->Fast GOBO2 Shaking Slow->Fast

				082-090 091-099 100-108 109-117 118-127 128-189 190-193 194-255	GOBO3 Shaking Slow->Fast GOBO4 Shaking Slow->Fast GOBO5 Shaking Slow->Fast GOBO6 Shaking Slow->Fast GOBO7 Shaking Slow->Fast Counter-Clockwise rotation, fast to slow Stop Clockwise rotation, slow to fast
22	17	18	15	000-127 128-189 190-193 194-255	R-GOBO 1 Index 0°→360° Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
23	18	19	16	000-255	R-GOBO 1 FINE 0%→100%
24	19	20	17	000-007 008-015 016-023 024-031 032-039 040-047 048-055 056-063 064-072 073-081 082-090 091-099 100-108 109-117 118-127 128-189 190-193 194-255	GOBO2 OPEN GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6 GOBO7 GOBO1 Shaking Slow->Fast GOBO2 Shaking Slow->Fast GOBO3 Shaking Slow->Fast GOBO4 Shaking Slow->Fast GOBO5 Shaking Slow->Fast GOBO6 Shaking Slow->Fast GOBO7 Shaking Slow->Fast Counter-Clockwise rotation, fast to slow Stop Clockwise rotation, slow to fast
25	20	21	18	000-255	ANIMATION 0%→100%
26	21	22	19	000-255	R-ANIMATION 0%→100%
27	22	23	20	000-255	IRIS
28	23	24	21	000-007 008-255	Prism 1 Close Open
29	24	25	22	000-127 128-189 190-193	R-Prism 1 Index 0°~360° Clockwise Rotation, Fast to Slow Stop

				194-255	Counter-Clockwise Rotation, Slow to Fast
30	25	26	23	000-007 008-255	Prism 2 Close Open
31	26	27	24	000-127 128-189 190-193 194-255	R-Prism 2 Index 0°~360° Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
32	27	28	25	000-007 008-255	Frost1 Close Open
33	28	29	26	000-007 008-255	Frost2 0%→100%
34	29	30	27	000-255	Zoom 0%→100%
35	30	31	28	000-255	Zoom Fine 0%→100%
36	31	32	29	000-255	Focus 0%→100%
37	32	33	30	000-255	Focus Fine 0%→100%
38	33	34	31	000-007 008-015 016-131 132-139 140-181 182-189 190-231 232-239 240-247 248-255	Strobe Close Open Strobe from Slow to Fast Open Fast Open Slow Close Open Fast Close Slow Open Open Random Strobe Open
39	34	35	32	000-012 013-255	Dimmer Close Open
40	35	36	33	000-255	Dimmer Fine 0%→100%
41	36	37	34	000-255	BLADE 0%→100%
42	37	38	35	000-255	BLADE DW 1 0%→100%
43	38	39	36	000-255	BLADE DW 2 0%→100%

44	39	40	37	000-255	BLADE UP 1 0%→100%
45	40	41	38	000-255	BLADE UP 2 0%→100%
46	41	42	39	000-255	BLADE LF 1 0%→100%
47	42	43	40	000-255	BLADE LF 2 0%→100%
48	43	44	41	000-255	BLADE RG 1 0%→100%
49	44	45	42	000-255	BLADE RG 2 0%→100%
50	45	46	43		FUNCTION (To activate following functions, stop in DMX value for at least 3 seconds.)
				000-009	Null
				010-019	Blade Mode1
				020-029	Blade Mode2
				030-039	Linear
				040-049	Square law
				050-059	Inv SQ law
				060-069	S curve
				070-079	Fan Mode Standard
				080-089	Fan Mode Quiet
				090-099	Null
				100-109	LED Frequency Setting Enable
				110-119	LED Frequency Setting Disable
				120-122	Null
				123	900Hz
				124	1000Hz
				125	1100Hz
				126	1200Hz
				127	1300Hz
				128	1400Hz
129	1500Hz				
130	2500Hz				
131	4000Hz				
132	5000Hz				
133	6000Hz				
134	10000Hz				
135	15000Hz				
136	20000Hz				
137	25000Hz				
138-139	Null				
140-149	Pan/tilt Reset				
150-159	Effect Reset				
160-169	Color Calibration: On				

			170-179	Color Calibration: Off
			180-189	Calibration Mode: Hi CRI
			190-199	Calibration Mode: Hi Output
			200-209	Reset all
			210-219	Dimmer Speed Fast
			220-229	Dimmer Speed Smooth
			230-231	GOBO Short Cut Enable
			232-233	GOBO Short Cut Disable
			234-235	Color Short Cut Enable
			236-237	Color Short Cut Disable
			238-239	Sun Protection Mode: On
			240-241	Sun Protection Mode: Off
			242-243	Focus Compensate :Disable
			244-245	Focus Compensate :Near(10m)
			246-247	Focus Compensate :Medium(20m)
			248-249	Focus Compensate :Far(30m)
			250-255	Null

09/ Error Information

Error codes are shown continuously in the display when the fixture fails and they will not disappear until the fixture is repaired.

CPU-B/C/D/E/F /G Error

Check whether the 485 (DATA) leads on the PCB board are installed in place or disconnected.

Check whether the related 485 (DATA) signal circuit on the PCB board is damaged.

External Flash Error

Check whether the external flash storage device is properly inserted and secured.

Check whether the flash storage device is damaged or its file format is incompatible.

Color Cal IC Error

Check whether the data pins of the Color Calibration IC on the PCB board are poorly soldered or detached.

Check whether the related signal circuit of the Color Calibration IC on the PCB board is damaged.

Check whether the Color Calibration IC itself is faulty or has poor contact.

Color IC Type Error

Check whether the model of the installed color LED chips matches the preset configuration in the control system

Check whether the model identification circuit connection for the color IC is functioning properly.

If the LED module has been replaced recently, confirm that it is compatible with the current firmware version of the fixture.

Pan Reset Error

Check whether the position of the pan where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the pan operating range.

Check whether the Hall element on the pan is damaged.

Check whether the lead connecting the Hall element on the pan and the PCB board is in poor contact or disconnected.

Check whether the motor on the pan is damaged.

Check whether the related circuit of the motor drive board on the pan is damage.

Pan Encode Error

Check whether the encoder on the pan is damaged.

Check whether the lead connecting the encoder on the pan and the PCB board is in poor contact or disconnected.

Pan Encode No Find

Check whether the lead connecting the encoder on the pan and the PCB board is in poor contact or disconnected.

Pan Encode Disable

Check whether the encoder on the pan is damaged.

Tilt Reset Error

Check whether the position of the tilt where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the tilt operating range.

Check whether the Hall element on the tilt is damaged.

Check whether the lead connecting the Hall element on the tilt and the PCB board is in poor contact or disconnected.

Check whether the motor on the tilt is damaged.

Check whether the related circuit of the motor drive board on the tilt is damage.

Tilt Encode Error

Check whether the encoder on the tilt is damaged.

Check whether the lead connecting the encoder on the tilt and the PCB board is in poor contact or disconnected.

Tilt Encode No Find

Check whether the lead connecting the encoder on the tilt and the PCB board is in poor contact or disconnected.

Tilt Encode Disable

Check whether the encoder on the tilt is damaged.

Gobo1/2 Reset Error

Gobo1/2 Reset Error Check whether the position of the gobo wheel where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the gobo wheel operating range.

Check whether the Hall element on the gobo wheel is damaged.

Check whether the lead connecting the Hall element on the gobo wheel and the PCB board is in poor contact or disconnected.

Check whether the motor on the gobo wheel is damaged.

Check whether the related circuit of the motor drive board on the gobo wheel is damaged.

R-Gobo1 Reset Error

Check whether the magnet installed on the rotating gobo wheel has dislodged or is damaged.

Check whether there are obstructions within the operating range of the rotating gobo wheel.

Check whether the Hall sensor on the rotating gobo wheel is damaged.

Check whether the lead connecting the Hall sensor on the rotating gobo wheel to the PCB board is poorly connected or disconnected.

Check whether the motor on the rotating gobo wheel is damaged.

Check whether the related circuit on the motor driver board for the rotating gobo wheel is damaged.

Color Reset Error

Color Reset Error: Check whether the position of the color wheel where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the color wheel operating range.

Check whether the Hall element on the color wheel is damaged.

Check whether the lead connecting the Hall element on the color wheel and the PCB board is in poor contact or disconnected.

Check whether the motor on the color wheel is damaged.

Check whether the related circuit of the motor drive board on the color wheel is damaged.

Prism1/2 Reset Error

Prism1/2 Reset Error: Check whether the position of the prism where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the prism operating range.

Check whether the Hall element on the prism is damaged.

Check whether the lead connecting the Hall element on the prism and the PCB board is in poor contact or disconnected.

Check whether the motor on the prism is damaged.

Check whether the related circuit of the motor drive board on the prism is damaged.

R-Prism1/2 Reset Error

Check whether the magnet installed on the rotating prism assembly has dislodged or is damaged.

Check whether there are obstructions within the operating range of the rotating prism.

Check whether the Hall sensor on the rotating prism is damaged.

Check whether the lead connecting the Hall sensor on the rotating prism to the PCB board is poorly connected or disconnected.

Check whether the motor on the rotating prism is damaged.

Check whether the related circuit on the motor driver board for the rotating prism is damaged.

Blade Reset Error

Check whether the position of the blade where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the blade operating range.

Check whether the Hall element on the blade is damaged.

Check whether the lead connecting the Hall element on the blade and the PCB board is in poor contact or disconnected.

Check whether the motor on the blade is damaged.

Check whether the related circuit of the motor drive board on the blade is damage.

Head Humidity Error

Immediately turn off the fixture and disconnect it from power.

Check whether there is any obvious moisture or condensation inside the lens or optical assembly.

Check whether the humidity sensor in the head is faulty or contaminated.

Do not attempt to restart the fixture until the error is confirmed to have cleared and the interior is fully dry.

Network Error

Check whether the network cable is correctly inserted and undamaged.

Verify that the fixture's IP address and network settings match the control system configuration.

Check whether the switch or network router is functioning properly and has sufficient available ports.

Verify that the control software's network protocol settings (e.g., Art-Net, sACN) are compatible with the fixture.

If using wireless DMX, check signal stability and receiver status. and has sufficient available ports.

Verify that the control software's network protocol settings (e.g., Art-Net, sACN) are compatible with the fixture.

If using wireless DMX, check signal stability and receiver status.

Cyan Reset Error

Check whether the position of the cyan color wheel where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the cyan color wheel operating range.

Check whether the Hall element on the cyan color wheel is damaged.

Check whether the lead connecting the Hall element on the cyan color wheel and the PCB board is in poor contact or disconnected.

Check whether the motor on the cyan color wheel is damaged.

Check whether the related circuit of the motor drive board on the cyan color wheel is damage.

Magenta Reset Error

Check whether the position of the magenta color wheel where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the magenta color wheel operating range.

Check whether the Hall element on the magenta color wheel is damaged.

Check whether the lead connecting the Hall element on the magenta color wheel and the PCB board is in poor contact or disconnected.

Check whether the motor on the magenta color wheel is damaged.

Check whether the related circuit of the motor drive board on the magenta color wheel is damage.

Yellow Reset Error

Check whether the position of the yellow color wheel where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the yellow color wheel operating range.

Check whether the Hall element on the yellow color wheel is damaged.

Check whether the lead connecting the Hall element on the yellow color wheel and the PCB board is in poor contact or disconnected.

Check whether the motor on the yellow color wheel is damaged.

Check whether the related circuit of the motor drive board on the yellow color wheel is damage.

CTO Reset Error

Check whether the position of the cto where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the cto operating range.

Check whether the Hall element on the cto is damaged.

Check whether the lead connecting the Hall element on the cto and the PCB board is in poor contact or disconnected.

Check whether the motor on the cto is damaged.

Check whether the related circuit of the motor drive board on the cto is damage.

Gobo 1/2 Reset Error

Check whether the position of the gobo wheel 1/2 where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the gobo wheel 1/2 operating range.

Check whether the Hall element on the gobo wheel 1/2 is damaged.

Check whether the lead connecting the Hall element on the gobo wheel 1/2 and the PCB board is in poor contact or disconnected.

Check whether the motor on the gobo wheel 1/2 is damaged.

Check whether the related circuit of the motor drive board on the gobo wheel 1/2 is damage.

R-Gobo 1 Reset Error

Check whether the position of the gobo wheel 1 where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the gobo wheel 1 operating range.

Check whether the Hall element on the gobo wheel 1 is damaged.

Check whether the lead connecting the Hall element on the gobo wheel 1 and the PCB board is in poor contact or disconnected.

Check whether the motor on the gobo wheel 1 is damaged.

Check whether the related circuit of the motor drive board on the gobo wheel 1 is damage.

Color Reset Error

Check whether the position of the color wheel where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the color wheel operating range.

Check whether the Hall element on the color wheel is damaged.

Check whether the lead connecting the Hall element on the color wheel and the PCB board is in poor contact or disconnected.

Check whether the motor on the color wheel is damaged.

Check whether the related circuit of the motor drive board on the color wheel is damage.

Animation Reset Error

Check whether the position of the animation wheel where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the animation wheel operating range.

Check whether the Hall element on the animation wheel is damaged.

Check whether the lead connecting the Hall element on the animation wheel and the PCB board is in poor contact or disconnected.

Check whether the motor on the animation wheel is damaged.

Check whether the related circuit of the motor drive board on the animation wheel is damage.

Prism 1/2 Reset Error

Check whether the position of the prism 1/2 where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the prism 1/2 operating range.

Check whether the Hall element on the prism 1/2 is damaged.

Check whether the lead connecting the Hall element on the prism 1/2 and the PCB board is in poor contact or disconnected.

Check whether the motor on the prism 1/2 is damaged.

Check whether the related circuit of the motor drive board on the prism 1/2 is damage.

R-Prism 1/2 Reset Error

Check whether the position of the prism 1/2 where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the prism 1/2 operating range.

Check whether the Hall element on the prism 1/2 is damaged.

Check whether the lead connecting the Hall element on the prism 1/2 and the PCB board is in poor contact or disconnected.

Check whether the motor on the prism 1/2 is damaged.

Check whether the related circuit of the motor drive board on the prism 1/2 is damage.

Focus Reset Error

Check whether the position of the focus where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the focus operating range.

Check whether the Hall element on the focus is damaged.

Check whether the lead connecting the Hall element on the focus and the PCB board is in poor contact or disconnected.

Check whether the motor on the focus is damaged.

Check whether the related circuit of the motor drive board on the focus is damage.

Zoom Reset Error

Check whether the position of the zoom where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the zoom operating range.

Check whether the Hall element on the zoom is damaged.

Check whether the lead connecting the Hall element on the zoom and the PCB board is in poor contact or disconnected.

Check whether the motor on the zoom is damaged.

Check whether the related circuit of the motor drive board on the zoom is damage.

Base Fan 1/2 Start Err

Check whether the fan is not running.

Check whether the fan leads are installed in place or disconnected.

Check whether the fan is damaged.

Check whether there are obstacles in the fan operating range.

Arm Fan 1 Start Err

Check whether the fan is not running.
Check whether the fan leads are installed in place or disconnected.
Check whether the fan is damaged.
Check whether there are obstacles in the fan operating range.

Head Fan 1/2/3/4/5/6/7/8/9/10/11 Start Err

Check whether the fan is not running.
Check whether the fan leads are installed in place or disconnected.
Check whether the fan is damaged.
Check whether there are obstacles in the fan operating range.

Led Temp. Error

Check whether the temperature detecting board is normal.
Check whether the components of the temperature detecting board are damaged.
Check whether the lead on the temperature detecting board is installed in place or disconnected.

LED Timeout Use**LED Too Hot Off**

When the fixture temperature reaches 85°C, it will automatically turn off to protect the fixture.

Base Humidity Error

Check whether the humidity sensor is faulty.
Check whether the lead connecting the humidity sensor is installed in place or disconnected.


Base Humi. Too High

Disassemble the housing of the fixture to dehumidify.

Memory Error

When the memory IC keeps reporting errors, please replace the motherboard.

Position of cooling fans:

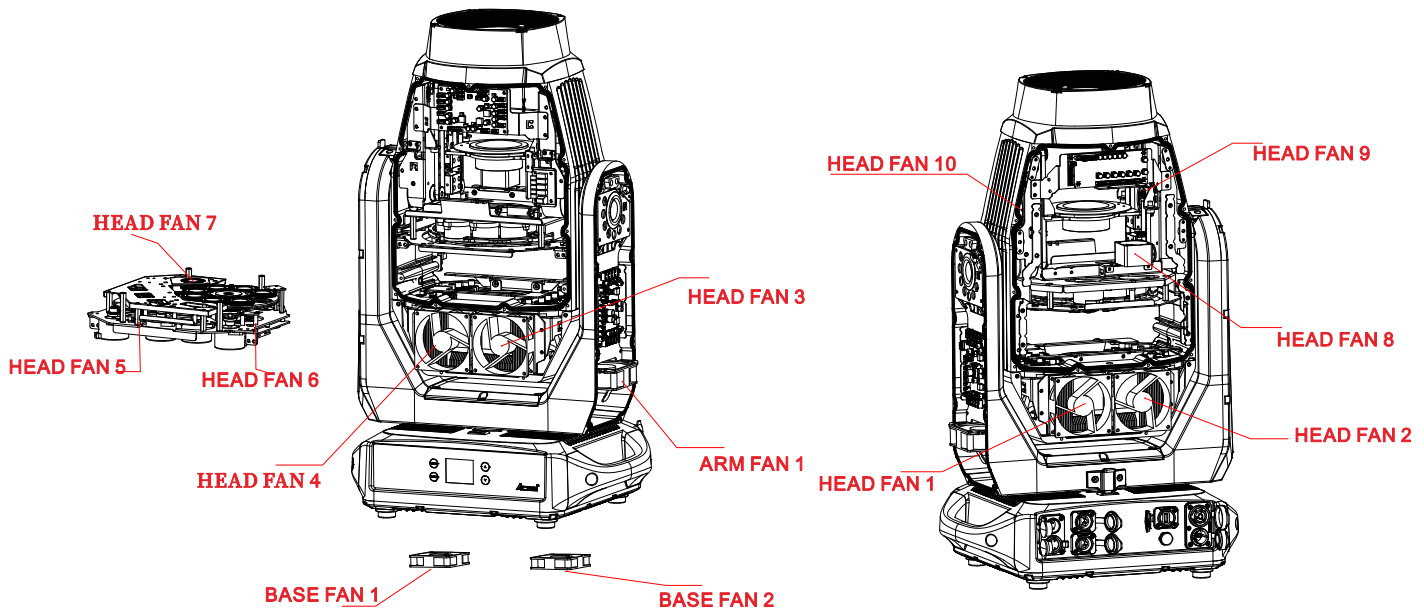

Cooling Fans	Part Number	V	W	Position
Base Fan 1	3014001251	DC 24V	3.6W	Base - B
Base Fan 2				
Arm Fan 1	3014001256	DC 24V	4.8W	Arm - E
Head Fan 1	3014003009	DC 24V	3.6W	Head - F
Head Fan 2				
Head Fan 3				
Head Fan 4				
Head Fan 5	3014001282	DC 24V	2.4W	Head - C
Head Fan 6				
Head Fan 7	3014001402	DC 12V	2.3W	Head - C
Head Fan 8	3014001428	DC 24V	7.2W	Head-F
Head Fan 9	3014001282	DC 24V	2.4W	Head - D
Head Fan 10	3014001282	DC 24V	2.4W	Head - D

10/ Troubleshooting

Problem	Potential cause(s)	Remedies
Fixture does not respond or appears to be off.	No power to the fixture.	Confirm that the power is switched on and cables are plugged in.
	No output from PSU.	Replace the PSU.
Fixture suddenly turned off.	Power was turned off.	Check the power supply, switches and breakers.
Light output cuts out intermittently.	Fixture is too hot.	Check fixture's stored error messages for more information. Allow fixture to cool. Clean fixture. Reduce ambient temperature.
Fixture suddenly stopped responding.	DMX cables were disconnected.	Inspect DMX cables.
Fixture operates irregularly / abnormal.	Incorrect DMX address or DMX mode.	Inspect and enter the correct DMX address or mode.
	DMX link is not terminated.	Install a XLR 120ohm DMX termination at the end of the DMX link.
	Bad data link.	Replace or repair defective cables and/or connections.
	One of the fixtures is defective and is disturbing data transmission on the link.	Track and isolate the corrupted fixture. Have the fixture serviced by a qualified technician.
Pan / tilt is skipping / shuddering	Pan/ tilt locks are not released.	Release the pan / tilt locks.
	Obstacles are within the required pan / tilt clearance.	Inspect and remove any obstacles constraining free operation of the pan / tilt.
	The Hall element is damaged.	Replace the Hall element.
	The magnetic steel fell out.	Replace the magnetic steel.

11/ Fixture Cleaning

Regular cleaning is very important for fixture life and performance. Buildup of dust, dirt, smoke particles, fog fluid residues, etc. degrades the fixture's light output and cooling ability. Cleaning schedules for lighting fixtures vary greatly depending on the operating environment. It is therefore impossible to specify precise cleaning intervals for the fixture. Environmental factors that may result in a need for frequent cleaning include:

- ▶ Use of smoke or fog machines.
- ▶ High airflow rates (near air conditioning vents, for example).
- ▶ Airborne dust (from stage effects, building structures and fittings or the natural environment at outdoor events, for example).

If one or more of these factors is present, inspect fixtures within their first few hours of operation to see whether cleaning is necessary. Check again at frequent intervals. This procedure will allow you to assess cleaning requirements in your particular situation.

Follow these precautions when cleaning the fixture:

- ▶ Work in a clean, dry, well-lit area.
- ▶ Use gentle pressure only. A soft lint-free cloth dampened with a solution of water and a mild detergent is recommended, under no circumstances should alcohol, solvents or abrasives be used! Use care when cleaning optical components: surfaces are fragile and easily scratched.

12/ Approvals and Certifications

This product has been tested and found to comply with the following standards:

- 2014/30/EU - Electromagnetic Compatibility (EMC)
- 2014/35/EU - Low Voltage Directive (LVD)
- cETLus Approved (Control #5000057)
- UK SI 2016 No. 1091: Electromagnetic Compatibility Regulations 2016
- UK SI 2016 No. 1101: The Electric Equipment (Safety) Regulations 2016



The information in this document is subject to change without notice.

For the latest information, visit www.acmelighting.com.



www.acmelighting.com